



ENGINE REMOVAL/INSTALLATION

Remove the fuel pump from the bracket with the fuel lines connected.

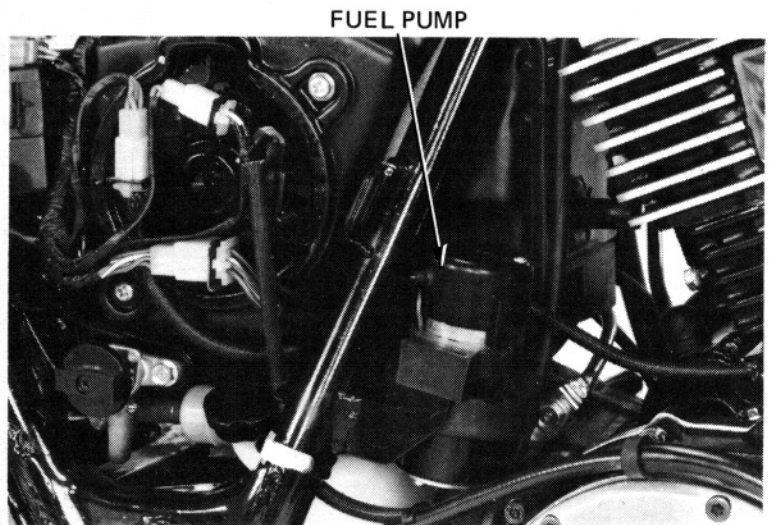

Disconnect the starter motor cable at the starter motor.

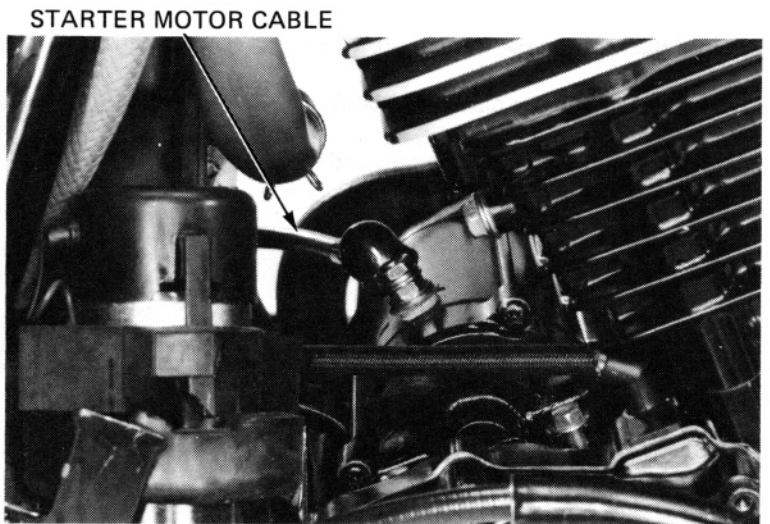

Loosen the right exhaust pipe clamp bolts.

Remove the right exhaust pipe joint nuts and remove the right exhaust pipe.

