

THERMOSTAT

REMOVAL

Turn the fuel valve OFF.

Remove the seat and fuel tank.

Remove the coolant drain bolt, and drain the coolant (page 6-3).

Remove the radiator cover.

Disconnect the radiator upper hose at the radiator.


Disconnect the wire connector from the temperature sensor.

Remove the bolt attaching the thermostat housing to the frame.

Remove the thermostat housing cover bolts and cover.

Remove the thermostat from the housing.

RADIATOR HOSE

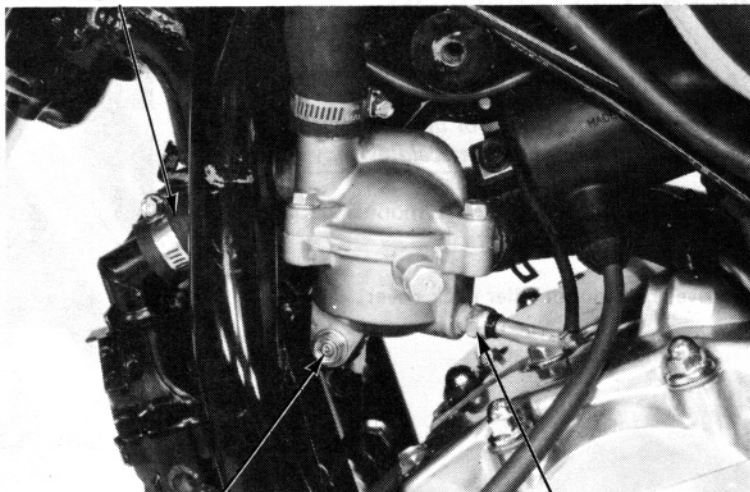

BOLTS

TEMPERATURE SENSOR

BOLTS



THERMOSTAT HOUSING COVER

THERMOSTAT



HOUSING