


CLUTCH

Remove the following:

- piston and secondary cup.
- primary cup and spring.
- clutch switch, if necessary.

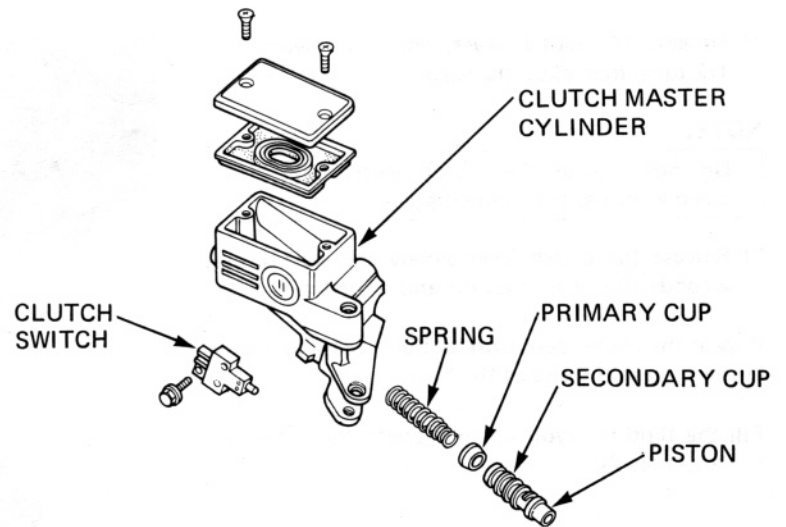


MASTER CYLINDER I.D. INSPECTION

Measure the master cylinder I.D.

Check the master cylinder for scores, scratches or nicks.

SERVICE LIMIT: 14.06 mm (0.553 in)

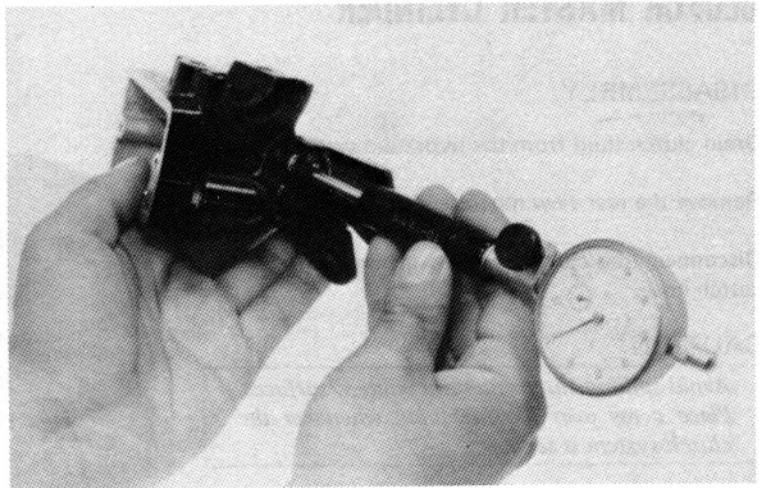

MASTER PISTON O.D. INSPECTION

Measure the master piston O.D.

SERVICE LIMIT: 13.94 mm (0.549 in)

Check the primary and secondary cups for damage before assembly.

