



CLUTCH

Remove the clutch pressure plate.

Remove the clutch plates and discs.

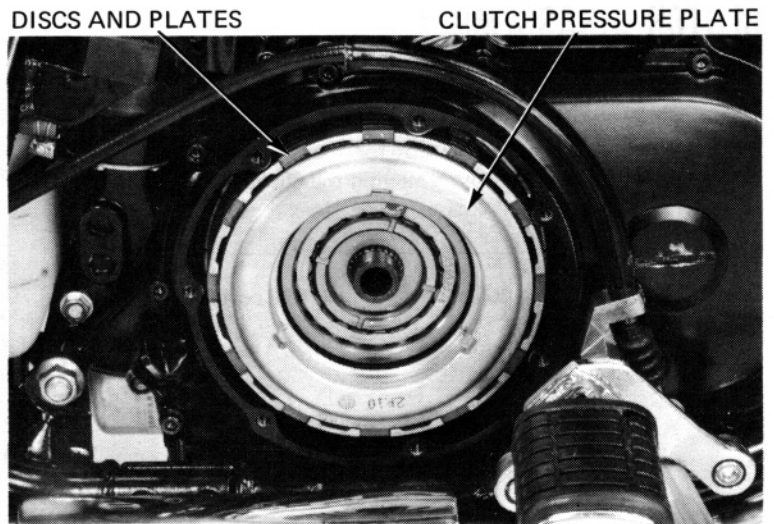

Remove clutch center B and the one-way clutch as an assembly.

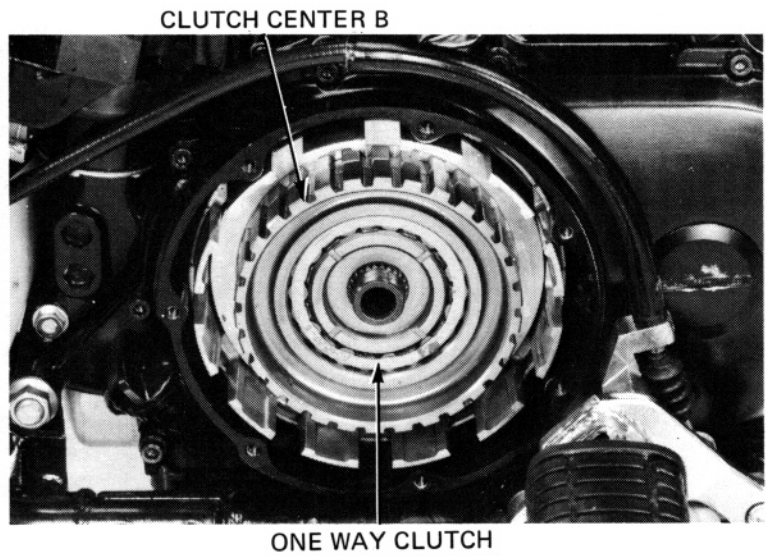

Remove clutch center A and washer.

