



Remove the valve stem seals and valve spring seats.

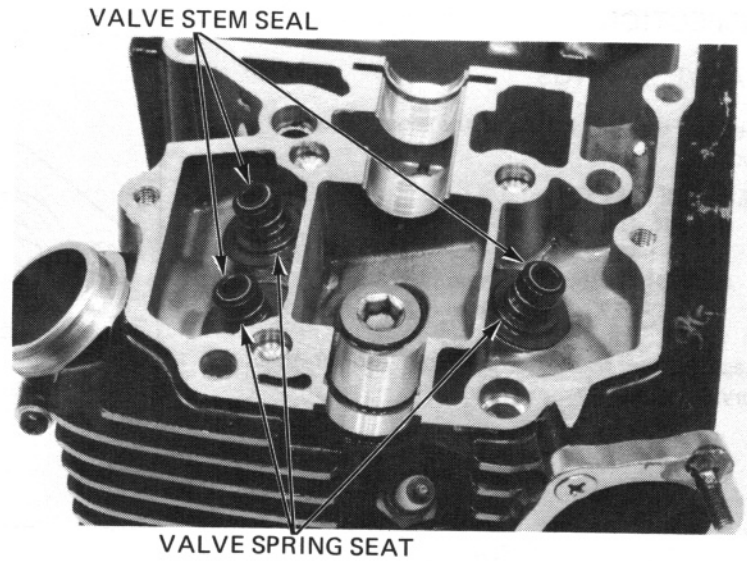

Remove carbon deposits from the combustion chamber and clean off the head gasket surfaces.

NOTE:

- Avoid damaging the gasket surfaces.
- Gaskets will come off easier if soaked in solvent.

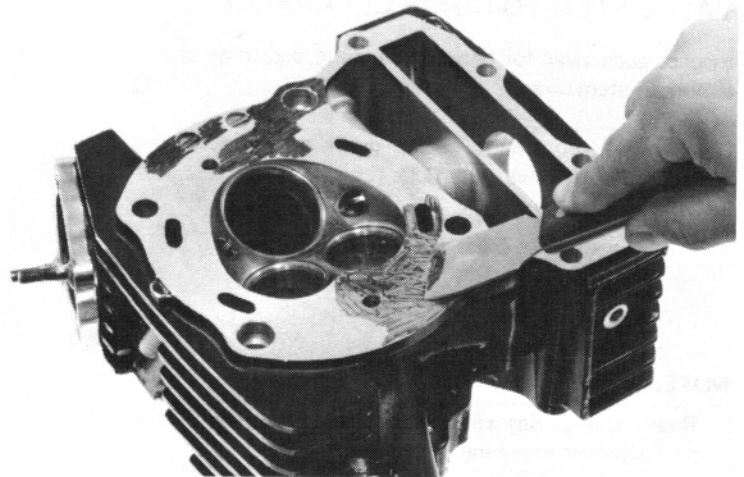

INSPECTION

CYLINDER HEAD

Check the spark plug hole and valve areas for cracks.

Check the cylinder head for warpage with a straight edge and feeler gauge.

SERVICE LIMIT: 0.10 mm (0.004 in)

