



CYLINDER REMOVAL

Remove the cylinder heads (Refer to Section 10).

Remove the gaskets and dowel pins and the cam chain guides.

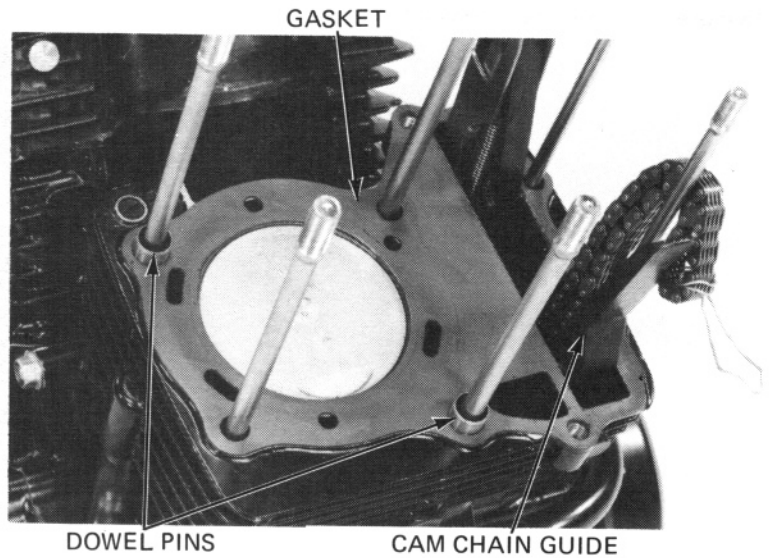

Remove the cam chain tensioner bolt and sealing washer.

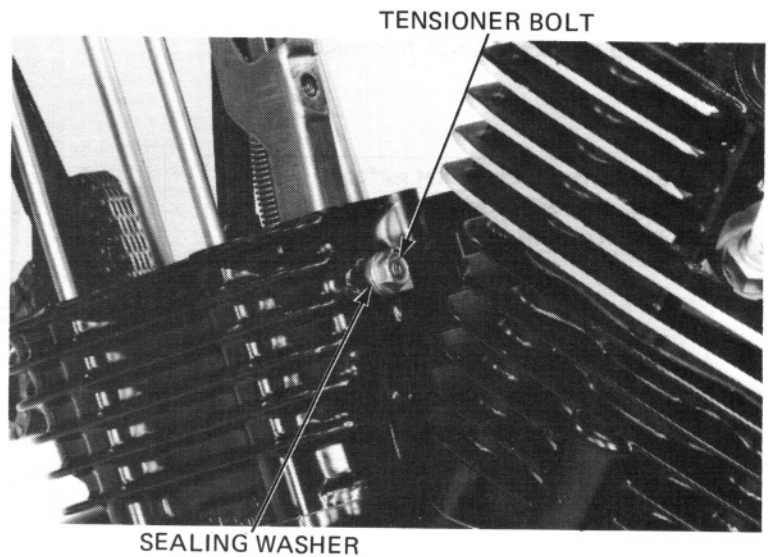

Remove the union bolts and remove the right and left water pipes from the cylinders by pulling them out by hand.
Remove the O-rings from the water pipes.

Remove the cylinders.

