

CYLINDER/PISTON

Carefully install the piston rings onto the piston with the markings facing up.

NOTE:

Be careful not to damage the piston and piston rings during assembly.

Stagger the ring end gaps 180° apart from each other as shown.

NOTE:

To install the oil ring, install the spacer first, then install the side rails.

After installing the rings, check that they rotate freely without sticking.

