


Install the tensioner bolts and sealing washers while pulling up on the tensioners.

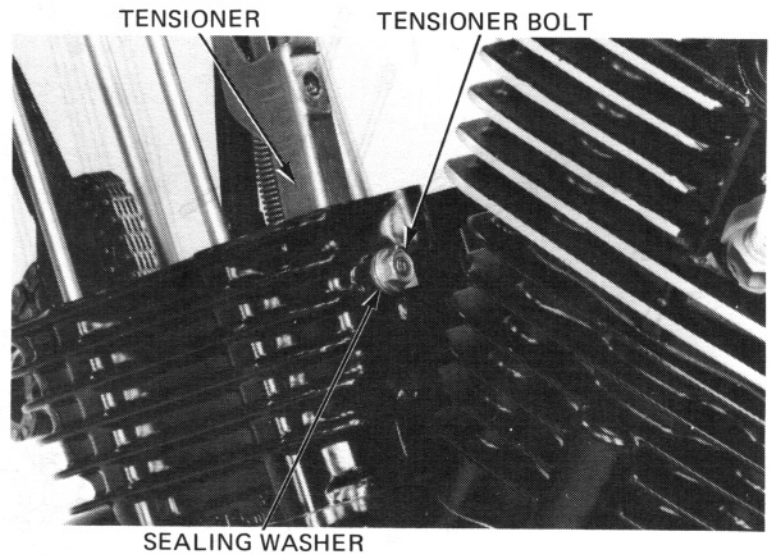

Install the dowel pins.
Install new gaskets.
Clean the cylinder contacting faces of the cylinder heads of gasket material and carbon deposits.
Install the cylinder heads (Page 10-18).

