

13. CRANKSHAFT/TRANSMISSION

SERVICE INFORMATION	13-2	TRANSMISSION REMOVAL	13-12
TROUBLESHOOTING	13-3	OUTPUT GEAR	13-17
OUTPUT GEAR CASE REMOVAL	13-4	SHIFT FORK/SHIFT DRUM	13-32
OUTPUT GEAR CASE INSTALLATION	13-4	CRANKCASE BEARINGS REPLACEMENT	13-34
CRANKSHAFT/CONNECTING ROD	13-5	TRANSMISSION INSTALLATION	13-35

