

## DRIVE TRAIN

---

### TOOLS

#### Special

Attachment	07945-3330300
Attachment	07947-6340201
Lock nut wrench, 30/64 mm	07916-MB00000 or 07910-MA10100
Pinion puller	07931-4630200 and 07931-MB00000 or 07935-MB00000
Pinion joint holder	07924-ME90000
Driver	07931-4630300 or 07947-3710101 and 07746-0010200
O-ring guide	07973-4630200
Bearing remover, 35 mm	07936-3710400

#### Common

Driver	07749-0010000
Attachment, 42 x 47 mm	07746-0010300
Attachment, 52 x 55 mm	07746-0010400
Attachment, 32 x 35 mm	07746-0010100
Pilot, 30 mm	07746-0040700
Driver C	07746-0030100
Attachment, 25 mm I.D.	07746-0030200 ] or Driver 07945-3710200

## TROUBLESHOOTING

#### Excessive noise

1. Worn or scored ring gear shaft and driven flange.
2. Scored driven flange and wheel hub.
3. Worn or scored drive pinion and splines.
4. Worn pinion and ring gears.
5. Excessive backlash between pinion and ring gear.
6. Oil level too low.

#### Oil leak

1. Clogged breather.
2. Oil level too high.
3. Seals damaged.