



Remove the retainer lock tab.

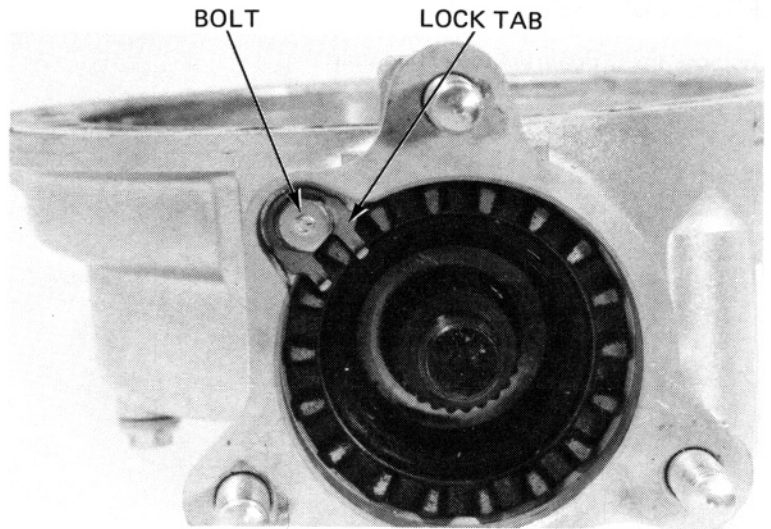


Remove the pinion retainer with the pinion retainer wrench.

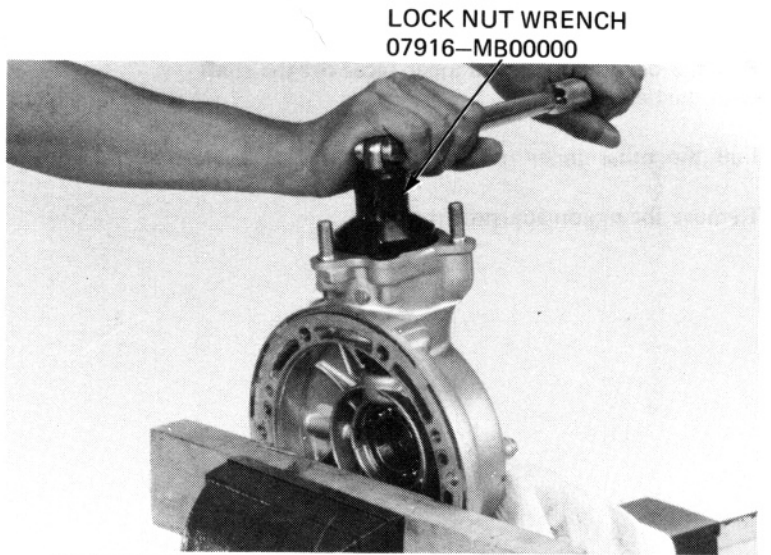

LOCK NUT WRENCH
07916-MB00000

Pull the pinion assembly off with the pinion puller.

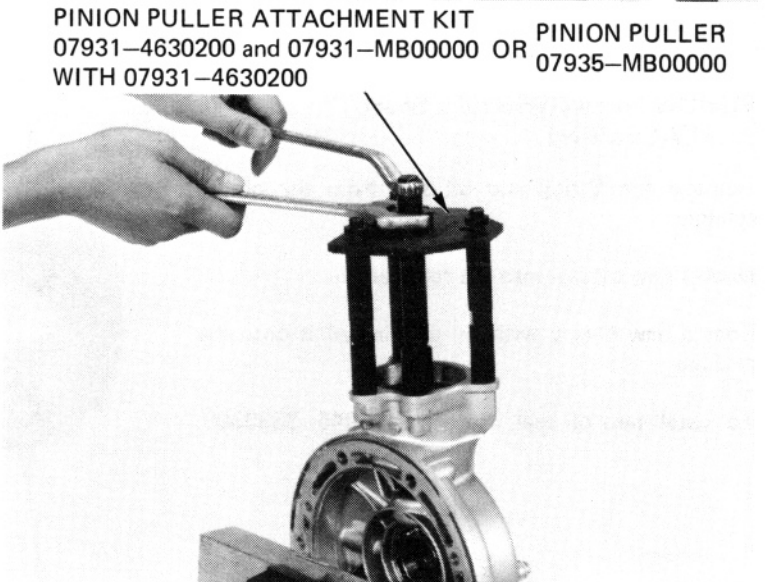

PINION PULLER ATTACHMENT KIT
07931-4630200 and 07931-MB00000 OR PINION PULLER
WITH 07931-4630200 07935-MB00000