

FRONT WHEEL/SUSPENSION

Pack all bearing cavities with grease.

Drive in the right bearing first and press the distance collar into place.


Drive in the left bearing squarely making sure that it is fully seated and that the sealed side is facing out.



ATTACHMENT, 42 x 47 mm 07746-0010300
PILOT, 15 mm 07746-0040300

Install the speedometer gear retainer into the wheel hub, aligning the tangs with the slots.

Install the left seal.

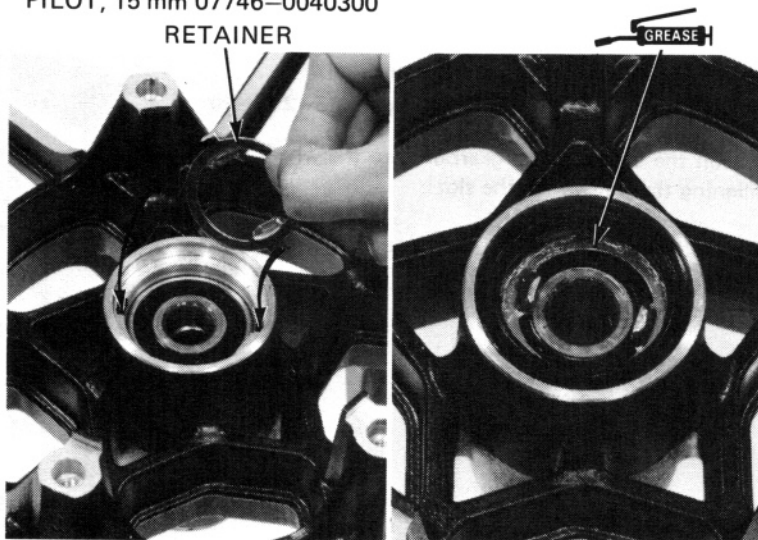

Install the right seal and side collar.

