


FRONT WHEEL/SUSPENSION

Remove the dust seal, sponge seal and plastic washer.


Remove the snap ring.

SNAP RING
SNAP RING PLIERS 07914-3230001
OR COMMERCIALLY AVAILABLE IN U.S.A.

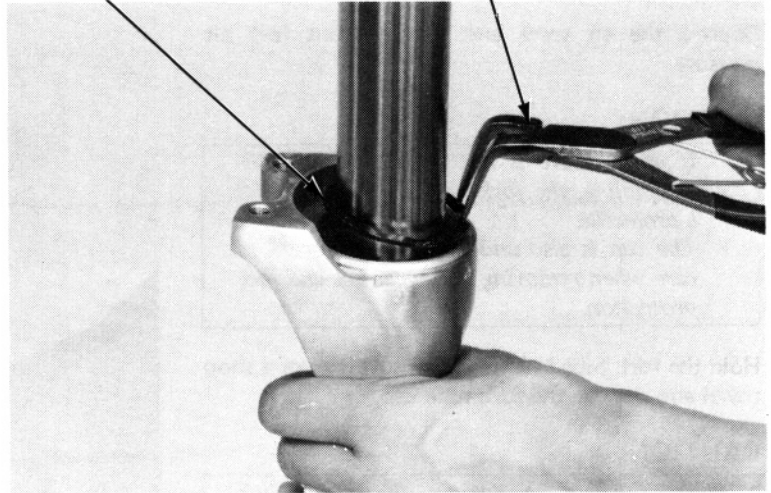

Pull the fork tube out until resistance from the slider bushing is felt. Then move it in and out, tapping the bushing lightly until the fork tube separates from the slider. The slider bushing will be forced out by the fork tube bushing.

Remove the oil lock piece from inside the slider.

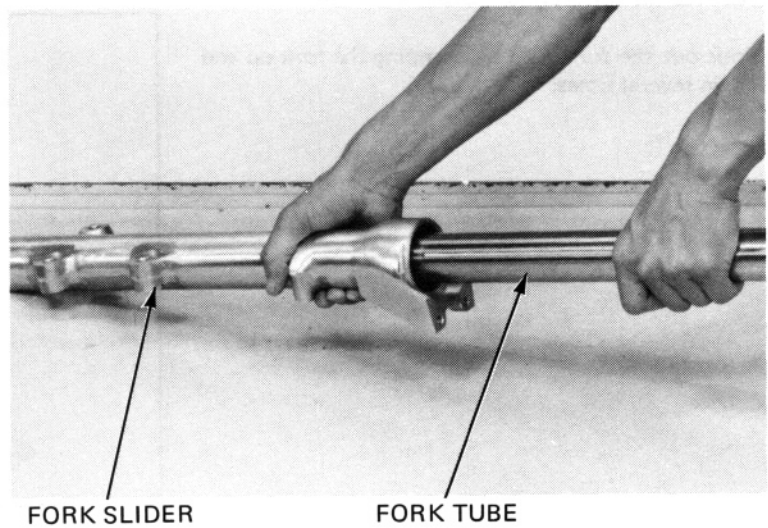

Remove the oil seal, back-up ring and slider bushing from the fork tube.

NOTE:

Do not remove the fork tube bushing unless it is necessary to replace it with a new one. See bushing inspection, page 15-24.

