


FRONT WHEEL/SUSPENSION

Reinstall the sliding guide onto the race remover.

Remove the lower ball race.

NOTE:


If the motorcycle has been involved in an accident, examine the area around the steering head for cracks.

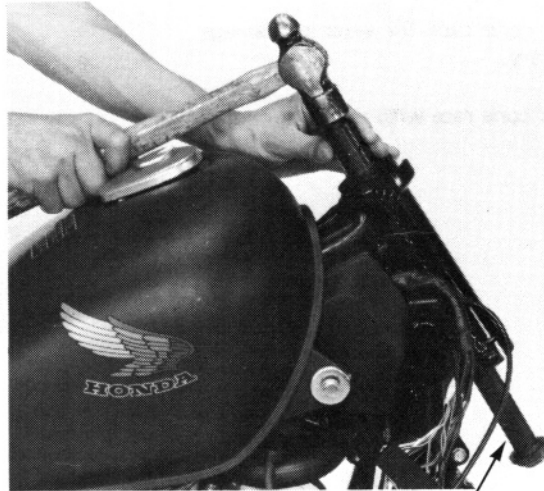

BEARING RACE REMOVER/INSTALLER
07946-3710400

Drive the upper ball race into the head pipe with the special tools.

Drive the lower ball race into the head pipe with the special tool.

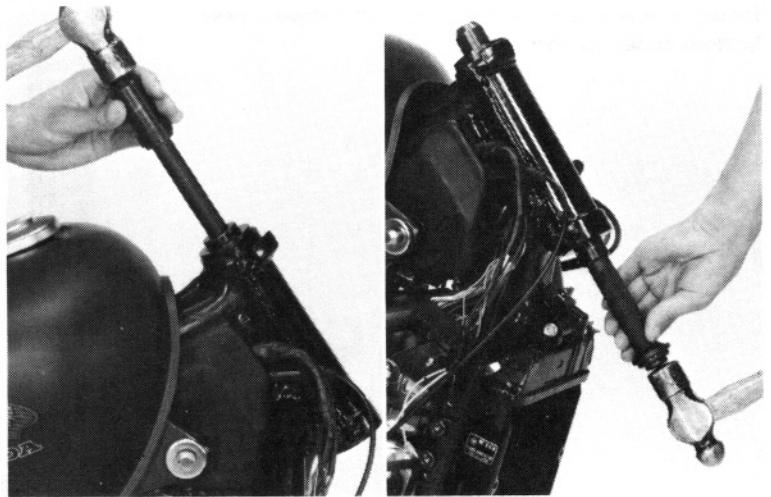


INSTALLATION

Apply grease to the top ball race and install 18 ball bearings.

Apply grease to the bottom ball race and install 19 ball bearings.

Insert the steering stem into the steering head pipe and install the top cone race.

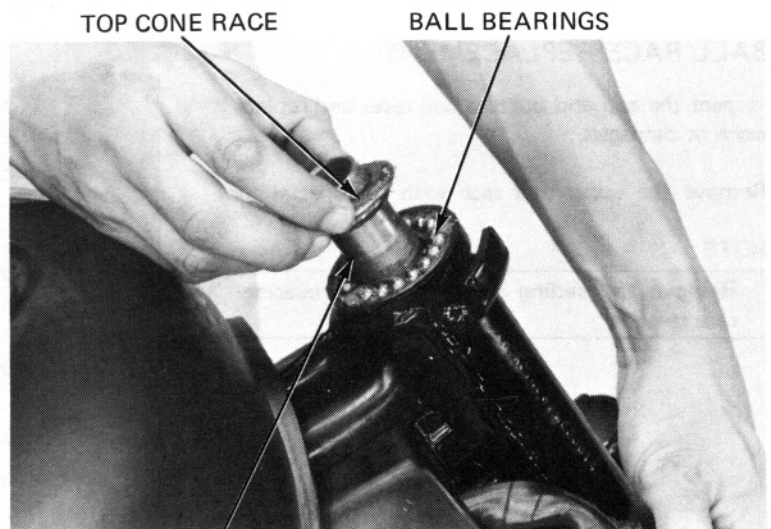

STEERING STEM