


REAR WHEEL

REMOVAL

Place the motorcycle on its center stand and loosen the axle nut.

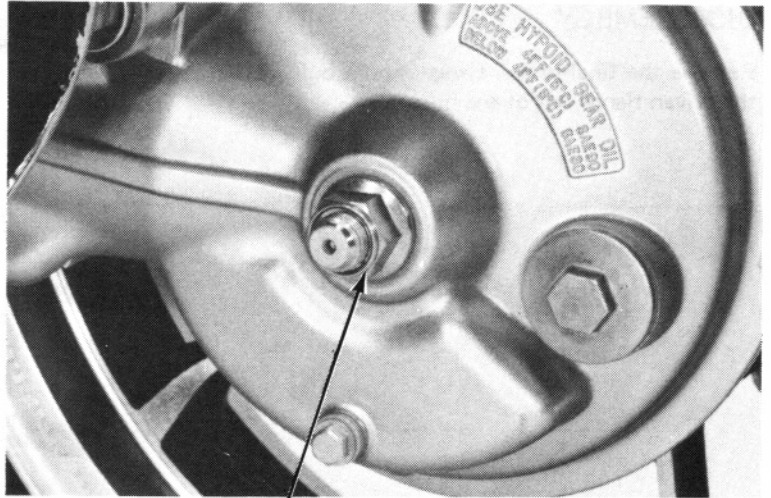


AXLE NUT

Remove the brake torque link bolt and disconnect the torque link.

Remove the brake adjusting nut and the brake rod.

Loosen the axle pinch bolt and remove the rear axle.

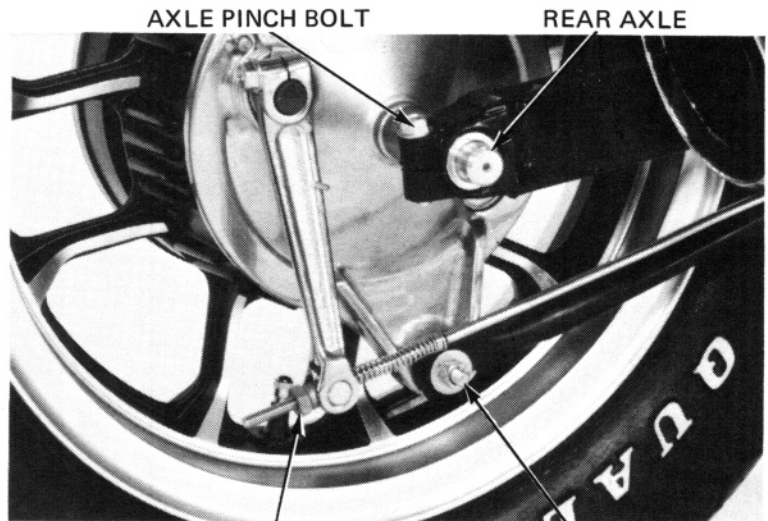

BRAKE ADJUSTING NUT TORQUE LINK BOLT

Move the wheel to the right to separate it from the final drive gear case and remove the rear wheel.

