


Install the felt seal, return spring and wear indicator.

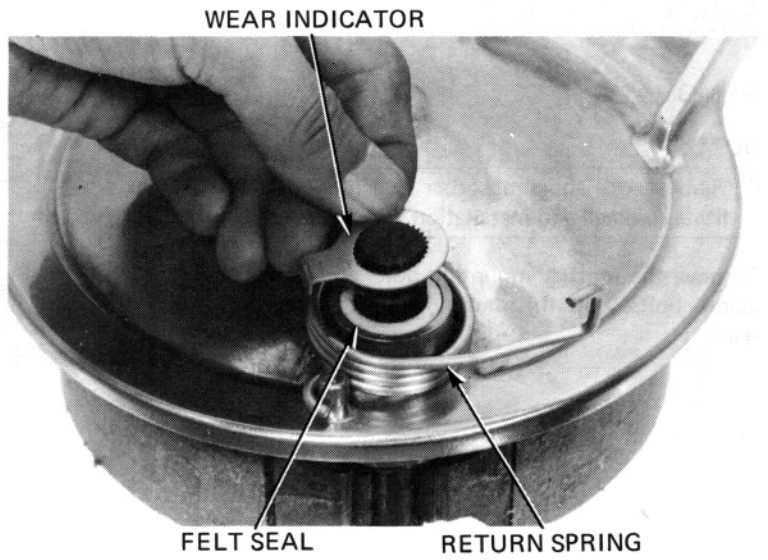

Install the brake arm, aligning the punch marks and tighten the brake arm bolt.

**TORQUE: 24–30 N·m (2.4–3.0 kg·m, 17–22 ft·lb)**

