


HYDRAULIC BRAKE

AIR BLEEDING

NOTE:

- Check the fluid level often while bleeding the brakes to prevent air from being pumped into the system.
- Use only **DOT 3 brake fluid** from a sealed container.
- Do not mix brake fluid types and never reuse the contaminated fluid which has been pumped out during brake bleeding, because this will impair the efficiency of the brake system.

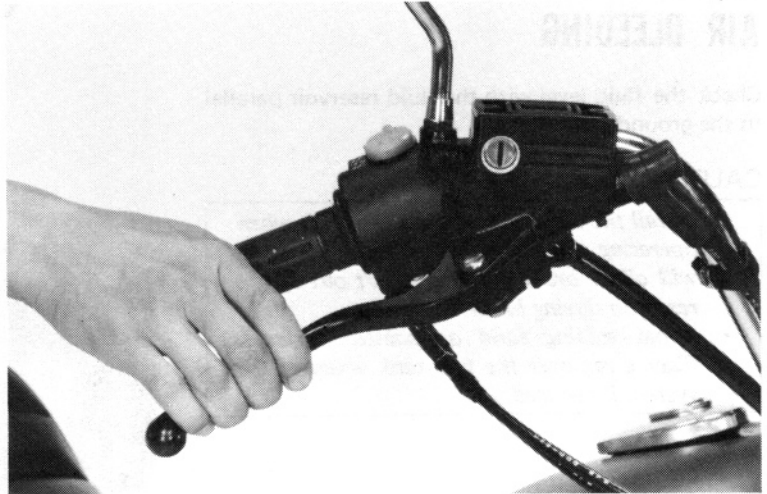


- 1) Squeeze the brake lever, open the bleed valve 1/2 turn and then close the valve.

NOTE:

Do not release the brake lever until the bleed valve has been closed.

- 2) Release the brake lever slowly and wait several seconds after it reaches the end of its travel.

Repeat steps 1 and 2 until bubbles cease to appear in the fluid at the end of the hose.

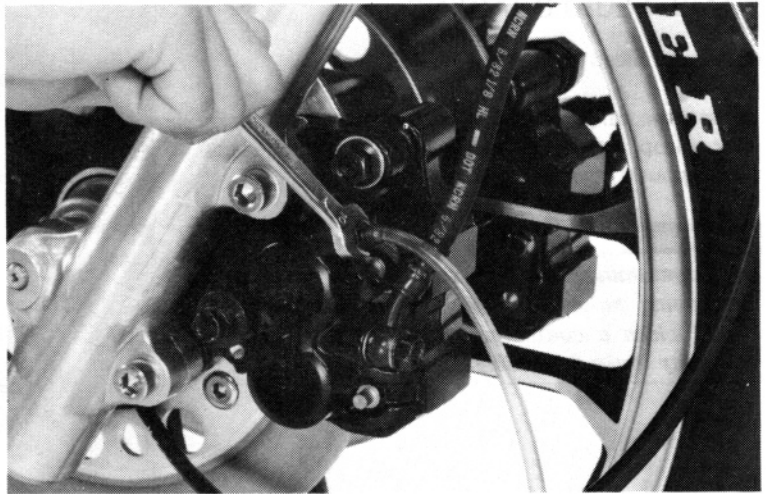

Fill the fluid reservoir to the upper level mark.

UPPER LEVEL

WARNING

A contaminated brake disc or pad reduces stopping power. Discard contaminated pads and clean a contaminated disc with a high quality brake degreasing agent.

