


HYDRAULIC BRAKE

Remove the piston boot and the circlip from the master cylinder body.

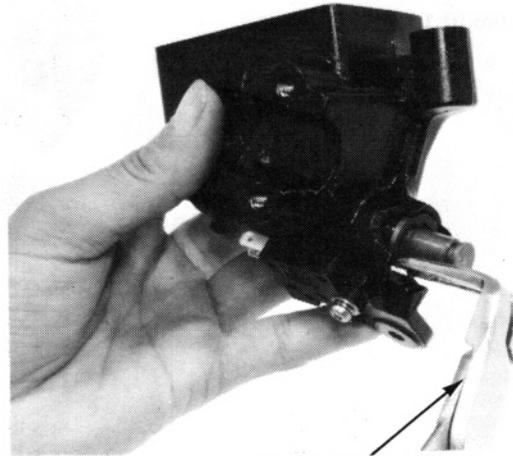


SNAP RING PLIERS
07914-3230001

Remove the secondary cup and piston. Then remove the primary cup and spring.

Remove the brake light switch from the master cylinder body, if necessary.

Clean the inside of the master cylinder and reservoir with brake fluid.

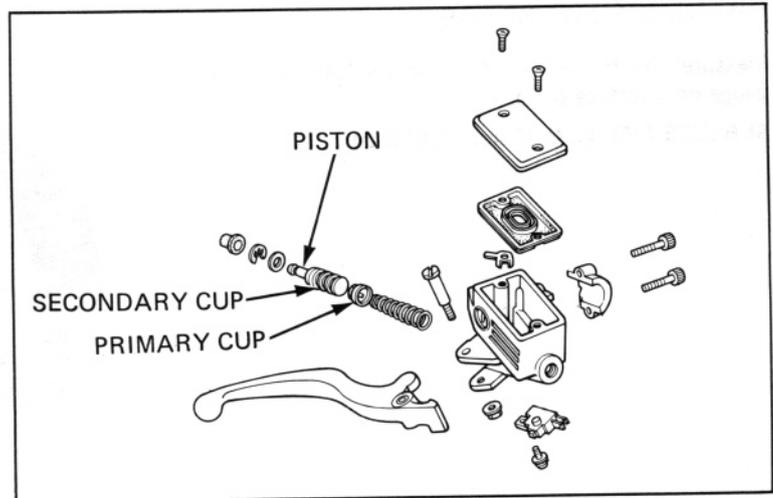

INSPECTION

Measure the master cylinder I.D.

SERVICE LIMIT: 15.93 mm (0.627 in)

Check the master cylinder for scores, scratches or nicks.

