


Push the piston seals in, lift them out and discard them.

Clean the oil seal grooves with brake fluid.

### CAUTION:


*Be careful not to damage the piston sliding surfaces when removing the seals.*

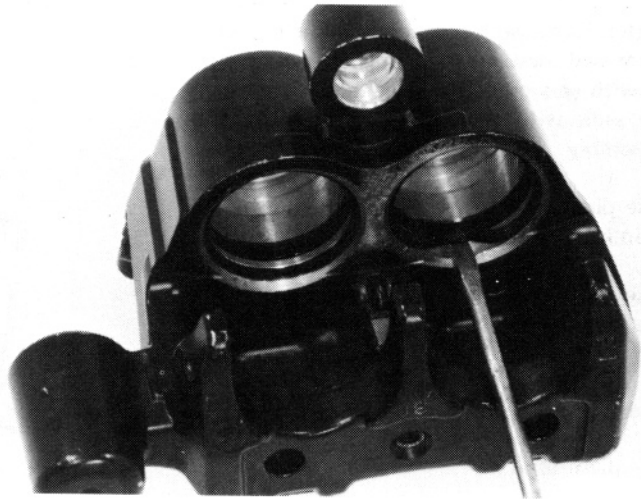

### PISTON INSPECTION

Check the pistons for scoring, scratches or other faults. Measure the piston diameter with a micrometer.

**SERVICE LIMIT: 30.14 mm (1.187 in)**

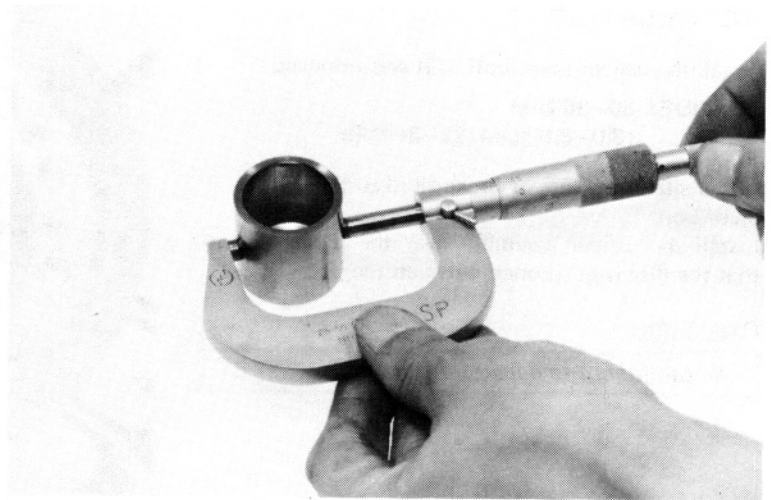

### CYLINDER INSPECTION

Check the caliper cylinder bore for scoring, scratches or other faults. Measure the caliper cylinder bore.

**SERVICE LIMIT: 30.29 mm (1.193 in)**

