


IGNITION COIL

REMOVAL

Remove the seat and, fuel tank and disconnect the ignition coil wire leads.
Remove the coils by removing the attaching bolts.


IGNITION COIL

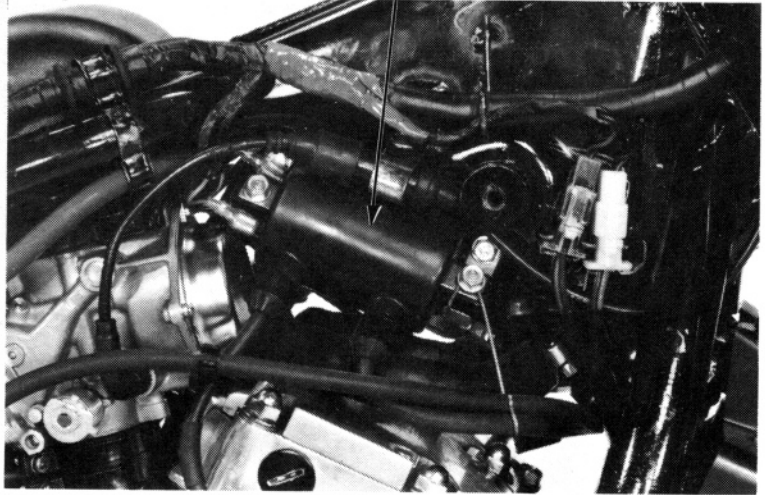

CONTINUITY TEST

Measure the primary coil resistance.

RESISTANCE: 2.0 ohms

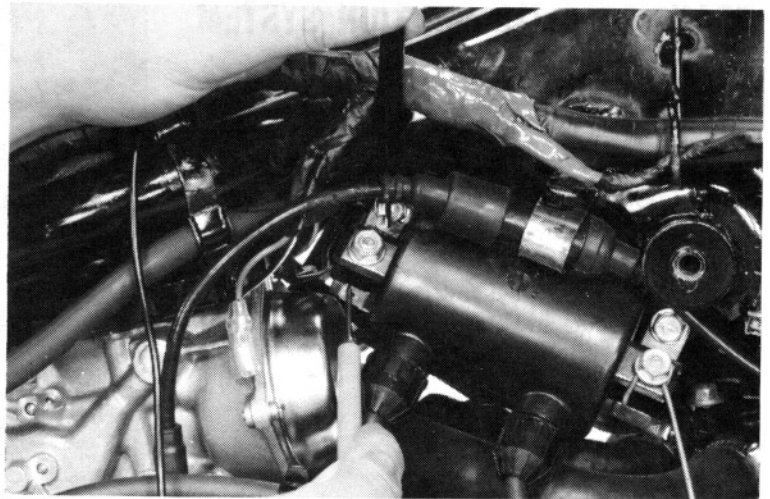

Measure the secondary coil resistance with the spark plug caps in place.

RESISTANCE: 29–40 k ohms

