


ELECTRIC STARTER


FIELD COIL INSPECTION

Check for continuity from the cable terminal to the motor case and from the cable terminal to the brush wire. Replace the starter motor if the field coil does not have continuity or if it is shorted to the motor case.

NO CONTINUITY BETWEEN
CABLE TERMINAL AND MOTOR CASE: NORMAL

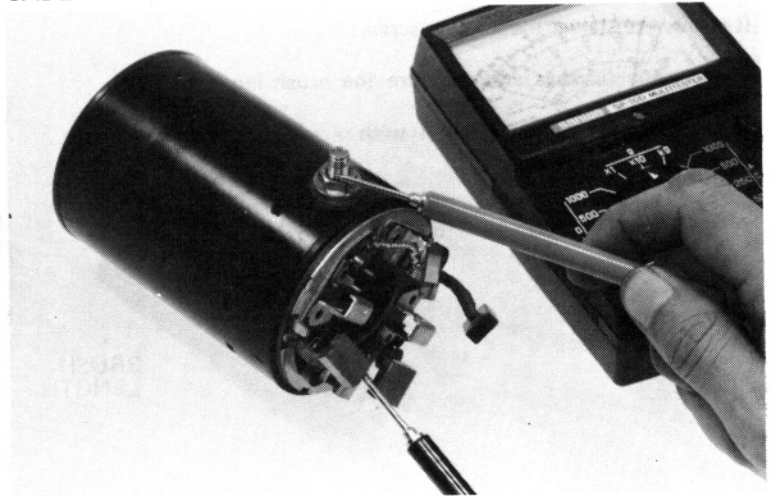

CONTINUITY BETWEEN
CABLE TERMINAL AND BRUSH WIRE (INSULATED): NORMAL
BRUSH HOLDER NOTCH PIN CASE

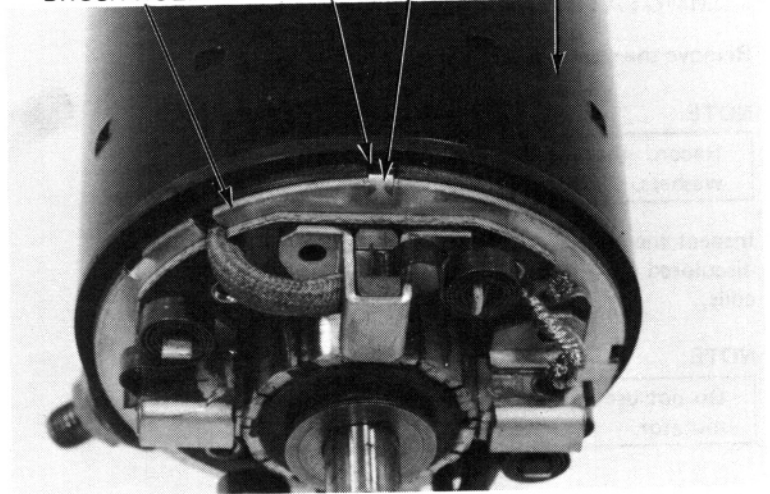

ASSEMBLY/INSTALLATION

Assemble the starter motor. Align the case notch with the brush holder pin.

Install the rear cover aligning its slot with the brush holder pin.

Install the starter motor in the reverse order of removal.

