



## SWITCHES

With the engine cold, use an ohmmeter to measure resistance between the temperature sensor terminal and the engine.

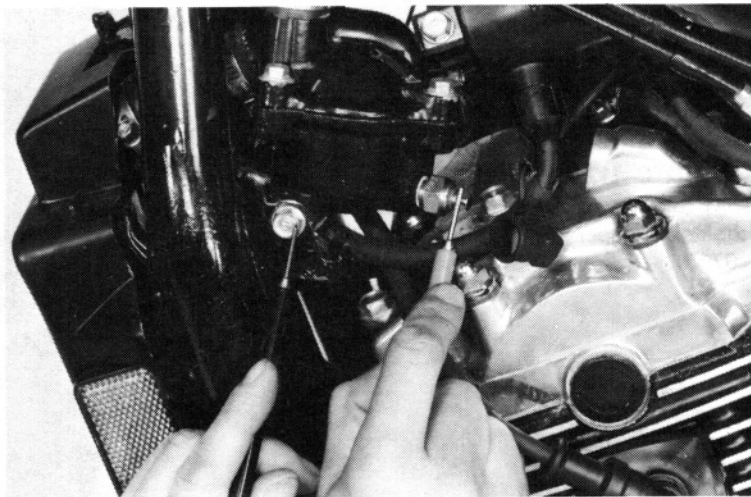

Check the temperature of the coolant.

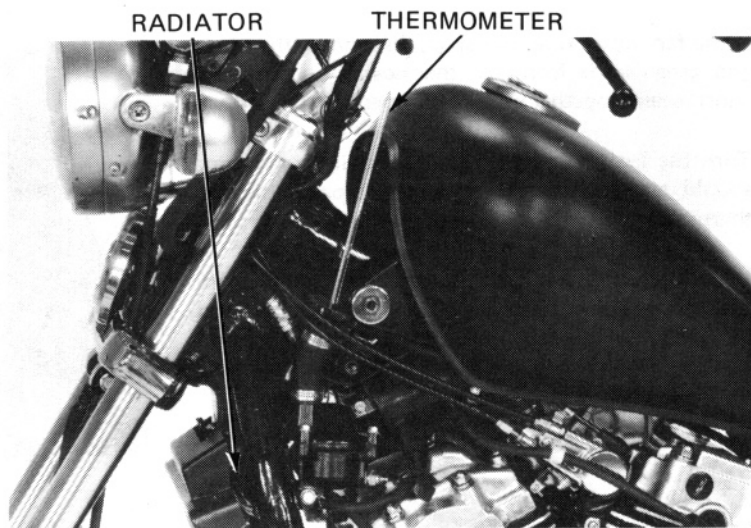

Run the engine and measure the change in resistance of the sensor with the engine at the operating temperatures in the chart.

Temperature	60°C (140°F)	85°C (185°F)	110°C (230°F)	120°C (248°F)
Resistance (Ohms)	104.0	43.9	20.3	16.1

Replace the sensor if it is out of specifications by more than 10% at any temperature listed.