


SEAT

REMOVAL

Unlock the seat with the ignition key.
Pull the seat back and remove it.

INSTALLATION

Install the seat, inserting the prong into the recess under the frame and the catches into the hooks of the frame.
Push the seat forward, then down to lock it.

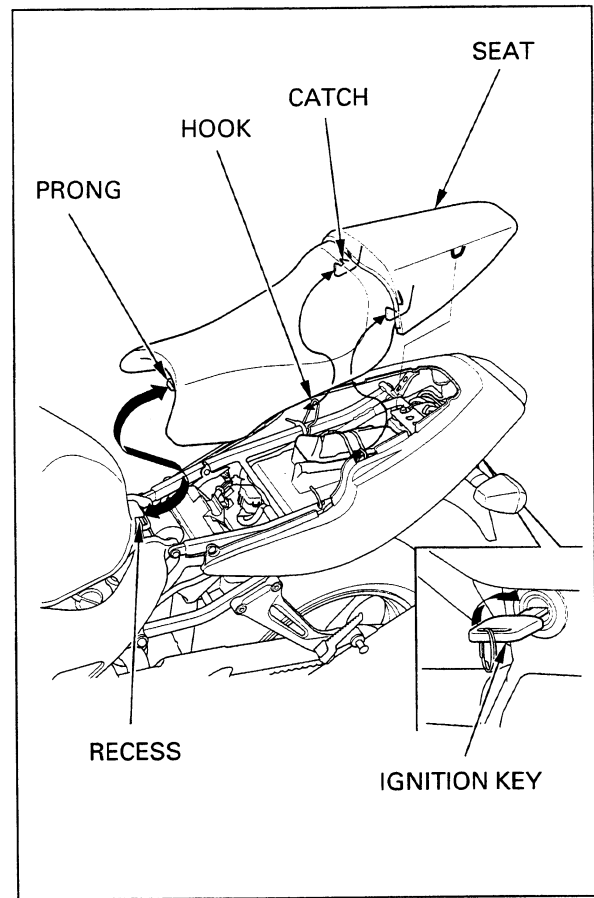

SEAT COWL

Remove the seat.
Disconnect the taillight connectors.
Remove the two trim clips.
Remove the four screws, washers and the seat cowl.

Install the seat cowl in the reverse order of removal.

