


MAINTENANCE

Coat a new O-ring with grease and install it onto the timing hole cap.

Apply grease the timing hole cap threads.

Install and tighten the timing hole cap.

TORQUE: 10 N·m (1.0 kgf·m , 7 lbf·ft)

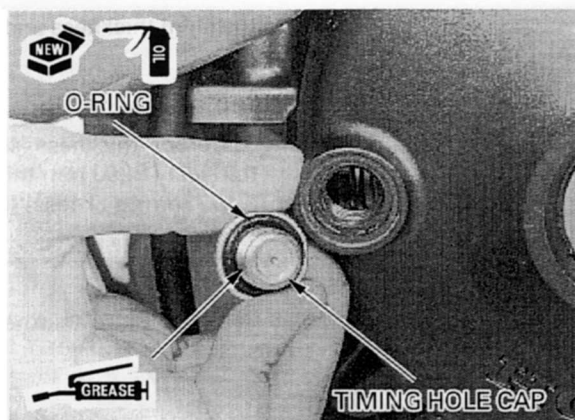


ENGINE OIL

Start the engine and let it idle for a few minutes.

Stop the engine, support the motorcycle upright on a level surface.

Wait for a few minutes and check that the oil level is between the upper and lower level marks in the inspection window.

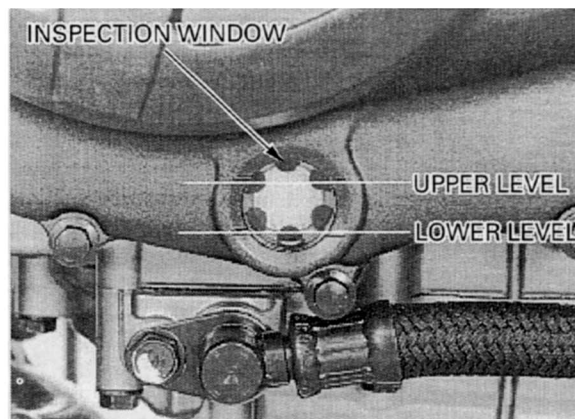


If the oil level is below or near the lower level mark, remove the oil filler cap and add the recommended engine oil up to the upper level mark.

RECOMMENDED ENGINE OIL:

Honda 4-stroke oil or equivalent motor oil

API service classification: SE, SF or SG

Viscosity: SAE 10W-40

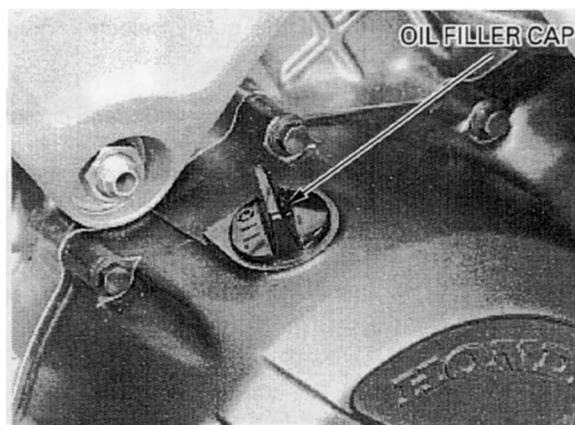

NOTE:

Other viscosities shown in the chart may be used when the average temperature in your riding area is within the indicated range.

Reinstall the filler cap.

For engine oil change, see next page.

