


AIR CLEANER HOUSING

REMOVAL/INSTALLATION

Remove the air cleaner element (page 3-5).


Remove the screws and air funnels.

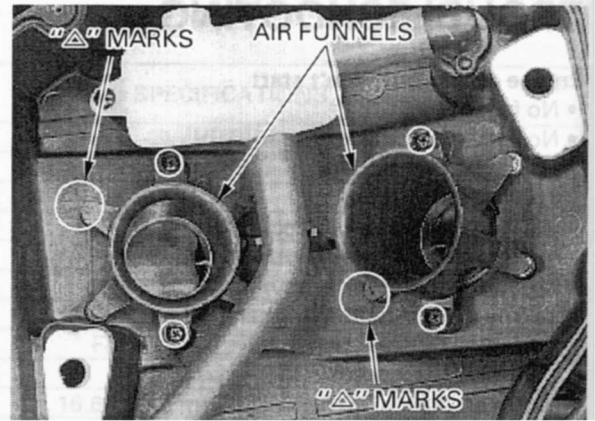


Remove the eight air cleaner housing mounting screws.

CAUTION:

Do not overtighten the screws when installing, as the threaded holes in the carburetors will be stripped.

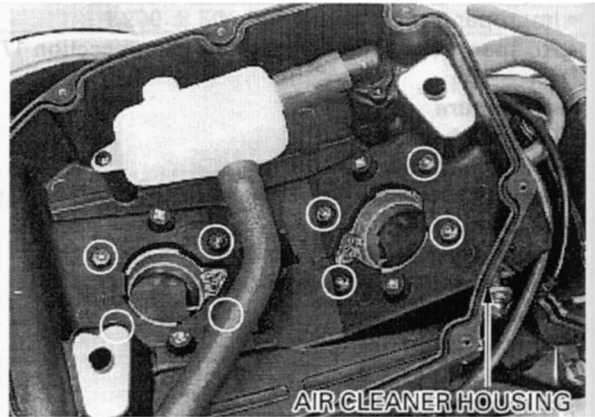

Disconnect the front and rear crankcase breather hoses and air hoses from the air cleaner housing. Remove the air cleaner housing.

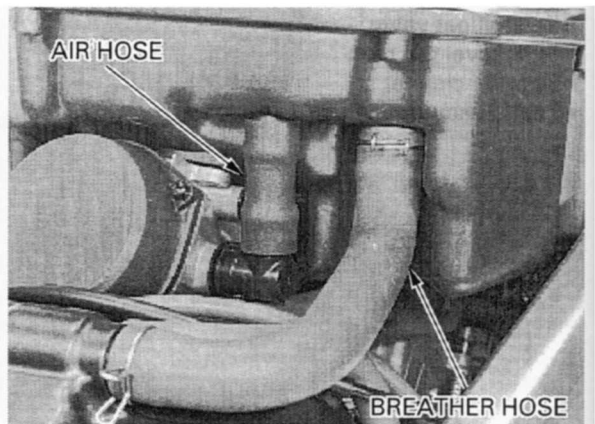

Remove the O-rings.

Install new O-rings into the carburetor grooves. Install the removed parts in the reverse order of removal.

NOTE:

- Note that the rear air funnel is longer than the front air funnel.
- Install the air funnels with the "△" marks on the air funnel and air cleaner housing aligned.

