

REPLACEMENT/AIR BLEEDING

▲WARNING

The engine must be cool before servicing the cooling system, or severe scalding may result.

NOTE:

When filling the system, place the motorcycle on its side stand on a flat, level surface.

Remove the front fairing (page 2-3).
Remove the radiator cap.

Disconnect the lower radiator joint hose at the right radiator by loosening the hose band screw and drain the coolant from the system.

Remove the drain bolt and drain the coolant from the front cylinder.

Disconnect the radiator siphon tube from the filler neck and drain the coolant from the reserve tank.

Connect the radiator lower joint hose and siphon tube, and install the drain bolt with a new sealing washer.

