



RIGHT CRANKCASE COVER REMOVAL

Drain the coolant from the system (page 6-5).

Disconnect the carburetor heater water outlet hose and bypass hose from the water pump cover. Remove the four bolts and the water pump cover. Loosen the hose band screw and disconnect the lower radiator hose from the water pump cover.

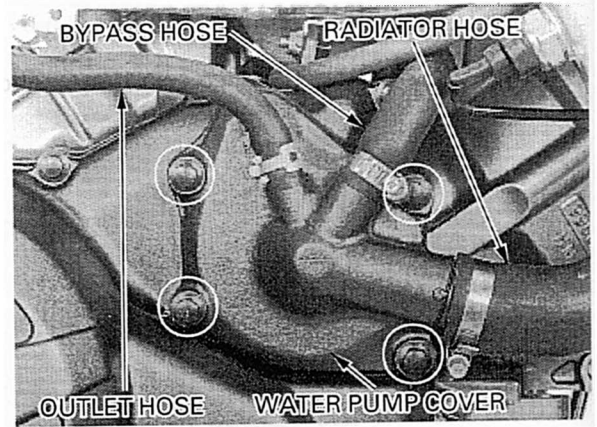

Remove the O-ring and dowel pins.

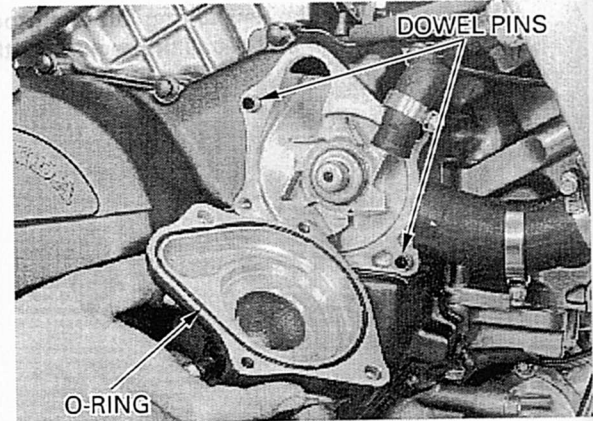

Disconnect the ignition pulse generator 2P (white) connector.



Remove the thirteen bolts and the right crankcase cover.

Remove the gasket and dowel pins.

