



Loosen the rear axle nut and drive chain adjusters. Remove the drive sprocket bolt, washer and the drive sprocket with the drive chain from the countershaft.

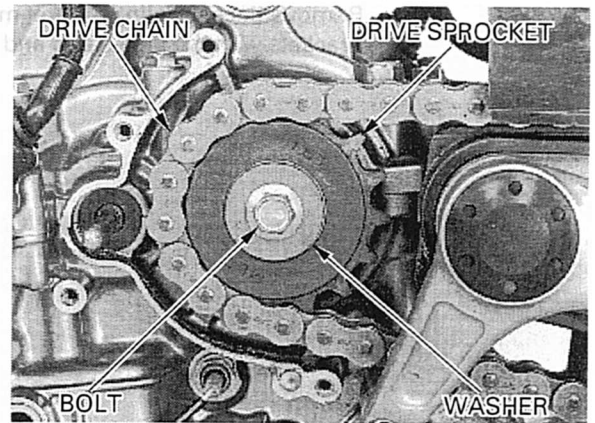

Disconnect the rear brake light switch connector. Remove the rear brake reservoir mounting bolt and the reservoir.

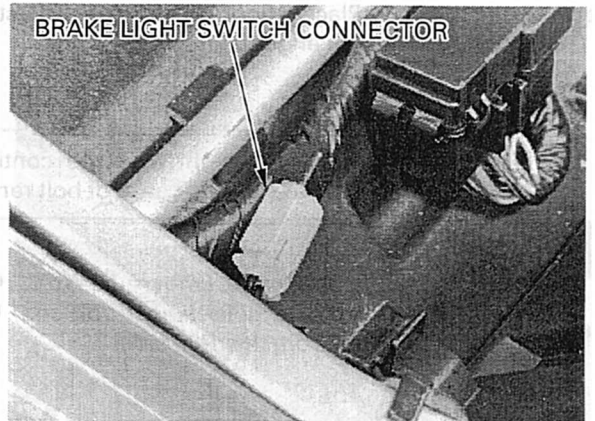

Support the motorcycle securely with a hoist or equivalent.

Remove the following:

- swingarm pivot caps
- shock link-to-bracket nut and bolt
- shock absorber lower mounting nut and bolt
- swingarm pivot nut, socket bolt, left driver footpeg bracket
- socket bolt, collar, swingarm pivot bolt, right driver footpeg bracket
- rear wheel, swingarm and rear brake system as an assembly

