

**REAR:**

Install the spark plug cap onto the plug.  
Connect the breather hose to the cylinder head cover.  
Connect the air supply hose to the PAIR check valve (SW, AR, IIG type only).

Install the fuel tank (page 2-4).

