

CRANKCASE/TRANSMISSION

Press a new bearing onto the mainshaft with the special tools.


TOOLS:

Inner driver C

07746-0030100

Attachment, 35 mm I. D.

07746-0030400

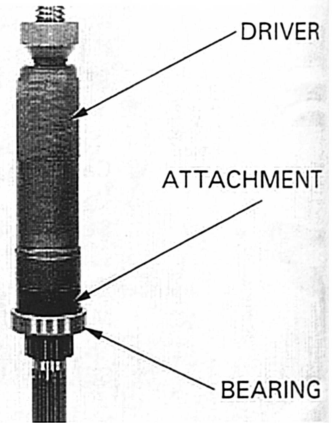

ASSEMBLY

Apply molybdenum oil solution to the gear teeth, sliding surface, shifter grooves and bushings.

Assemble the mainshaft and countershaft.

