

BATTERY

REMOVAL/INSTALLATION

Remove the seat (page 2-2).

Open the battery case cover.




With the ignition switch OFF, disconnect the negative (–) cable first, then the positive (+) cable. Remove the battery from the battery case.

Install the battery in the reverse order of removal.

NOTE:

- Connect the positive (+) cable first, then the negative (–) cable.
- After connecting the battery cables, coat the terminals with grease.

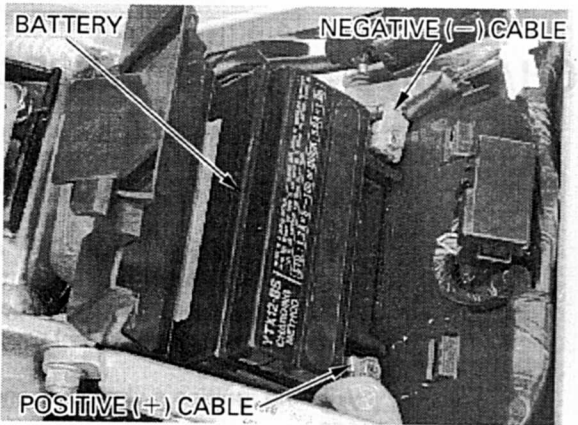


VOLTAGE INSPECTION

Open the battery case cover. Measure the battery voltage using a commercially available digital multimeter.

VOLTAGE (68 °F/20 °C):

Fully charged: 13.0 – 13.2 V

Under charged: Below 12.3 V

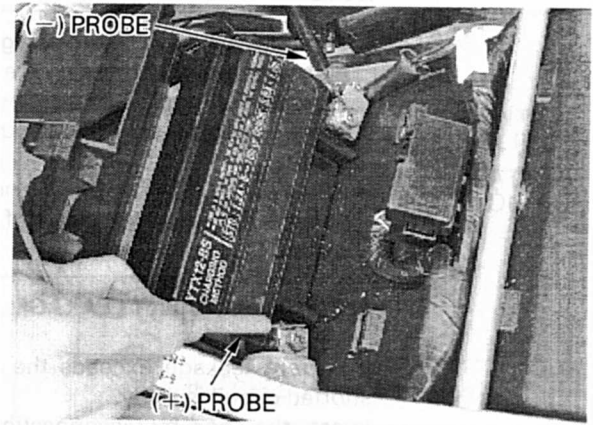

BATTERY CHARGING

▲WARNING

- *The battery gives off explosive gases; keep sparks, flames and cigarettes away. Provide adequate ventilation when charging.*
- *Turn the power ON/OFF at the charger, not at the battery terminals.*

Remove the battery.