

ELECTRIC STARTER

TROUBLESHOOTING

Starter motor will not turn

- Check for a blown main fuse (30 A) or sub-fuse (10 A)
- Check that the battery is fully charged and in good condition.

