

HEADLIGHT

BULB REPLACEMENT

▲WARNING

A halogen headlight bulb becomes very hot while the headlight is ON, and remains hot for a while after it is turned OFF. Be sure to let it cool down before servicing.

Disconnect the headlight connector.
Remove the dust cover.

Unhook the bulb retainer and replace the headlight bulb.




CAUTION:

Avoid touching halogen headlight bulb. Finger prints can create hot spots that cause a bulb to break.

If you touch the bulb with your bare hands, clean it with a cloth moistened with alcohol to prevent its early failure.

Hook the bulb retainer properly.

Install the dust cover properly onto the headlight with the "TOP" mark facing up.
Connect the headlight connector.

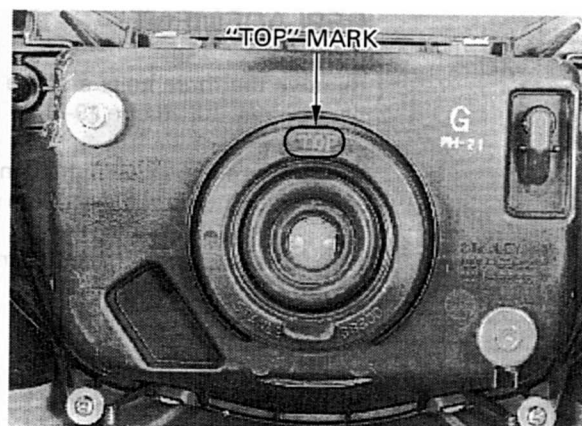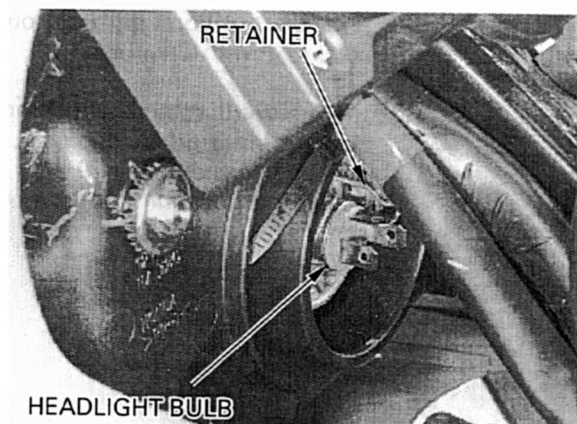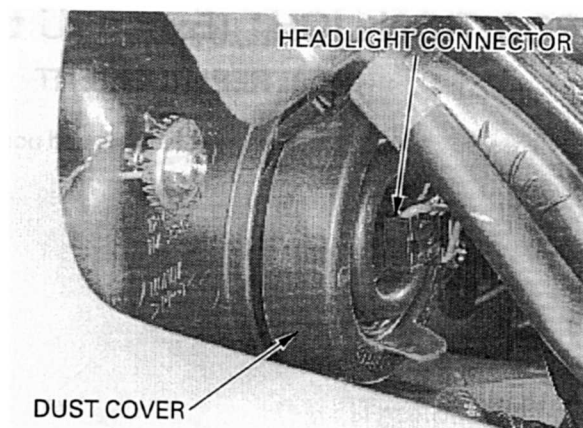

REMOVAL/INSTALLATION

Remove the front fairing (page 2-3).

Remove the four screws and the headlight unit.

Install the headlight unit in the reverse order of removal.

