


## POSITION LIGHT (Except U type)

### BULB REPLACEMENT


Remove the two screws and position light lens.

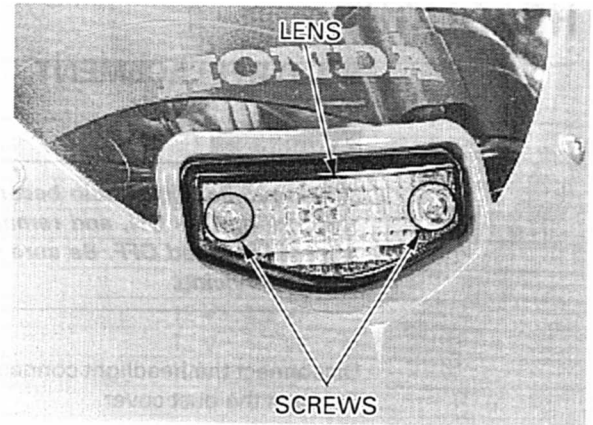

Pull the position light bulb out of the socket and replace it with a new one.

Make sure that the seal rubber is installed in position and is in good condition, and replace it with new one if necessary.

Install the position light lens and tighten the two screws.

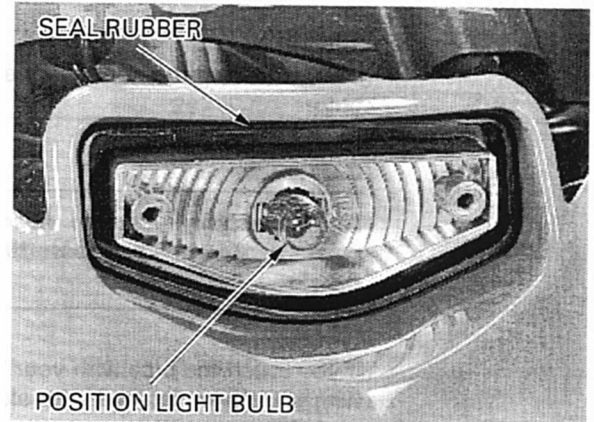


### REPLACEMENT

Remove the three bolts and the instrument assembly from the stay (page 19-6).

Disconnect the position light connector.  
Remove the two screws and the position light.

Install the position light in the reverse order of removal.

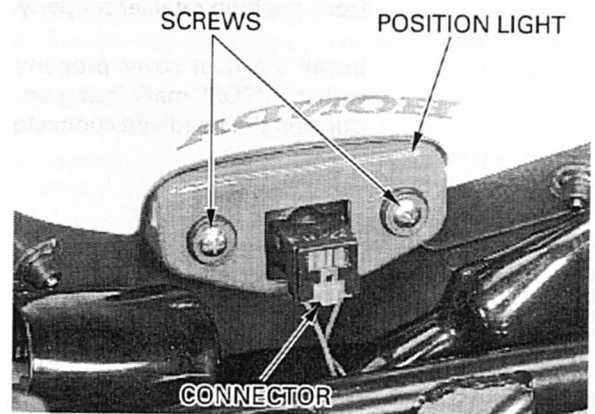

## TURN SIGNAL LIGHT

### BULB REPLACEMENT

Remove the screw and turn signal light lens.

