


While pushing the bulb in, turn it counterclockwise to remove it, and replace it with a new one.

Make sure that the seal rubber is installed in position and is in good condition, and replace it with new one if necessary.

Install the lens, aligning the hook with the tab of the turn signal light, and tighten the screw.

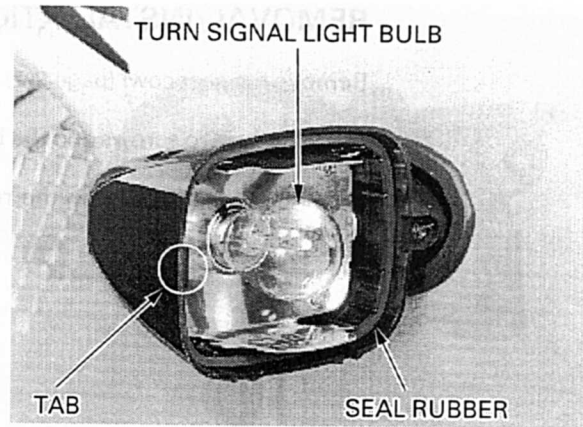


REMOVAL/INSTALLATION

Rear turn signal light: Remove the seat (page 2-2).

Disconnect the turn signal light connectors. Remove the nut, setting plate and the turn signal light.

Install the turn signal light in the reverse order of removal.

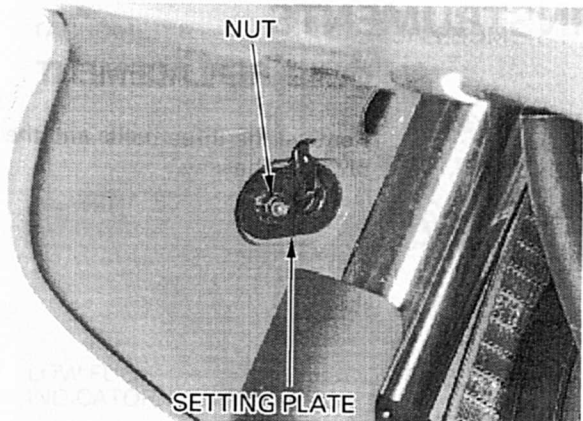


BRAKE/TAILLIGHT

BULB REPLACEMENT

Remove the seat (page 2-2).

Turn the socket counterclockwise and remove it from the brake/taillight.

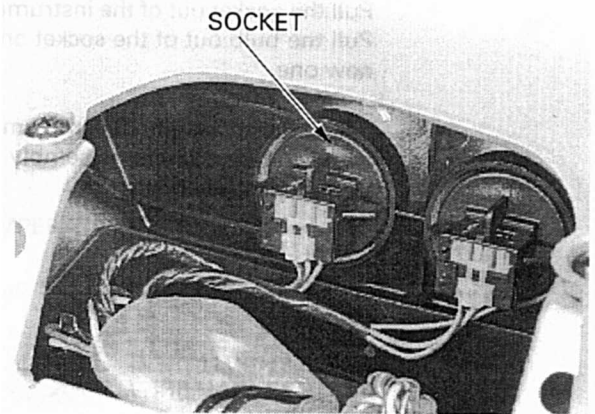

Pull the brake/taillight bulb out of the socket and replace it with a new one.

Make sure that the seal rubber is installed in position and is in good condition, and replace it with new one if necessary.

Install the socket by turning it clockwise. Install the seat (page 2-2).

