



**DISASSEMBLY**

Remove the five screws and upper case.

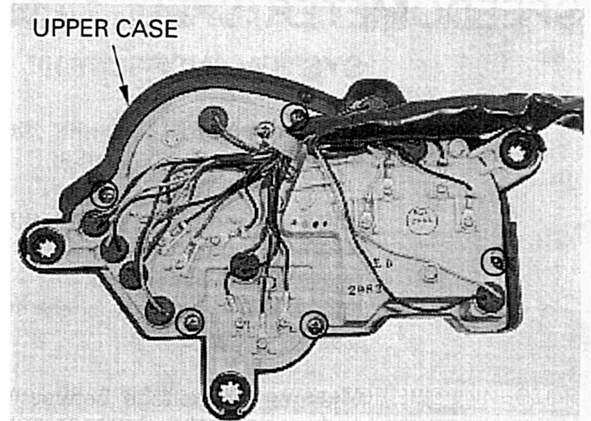

Remove the screws, speedometer, tachometer and coolant temperature gauge.  
Remove the bulb sockets and instrument wire harness.

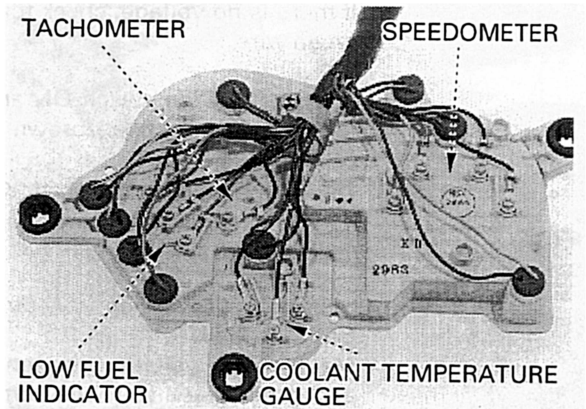

**ASSEMBLY**

**NOTE:**

Connect the wire terminal and install the bulb sockets according to the color codes on the lower case.

