


LIGHTS/METERS/SWITCHES

Check for continuity between the connector terminals in each switch position. Continuity should exist between the color coded wires as follows:

Position \ Color	R	R/BI	Bu/O
ON	○	○	○
OFF			
LOCK			

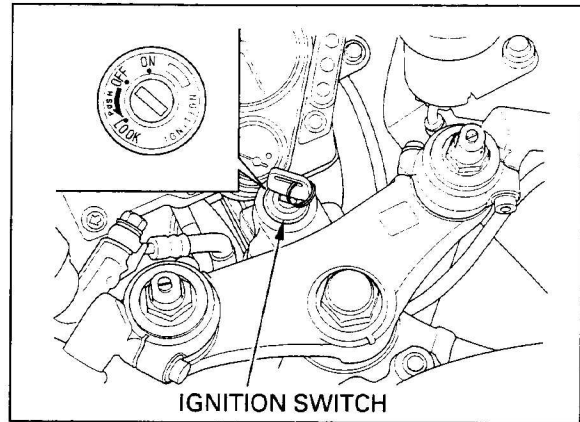

REMOVAL/INSTALLATION


Disconnect the ignition switch 3P (white) connector (page 19-13).

Remove the two mounting bolts and the ignition switch.

Install the ignition switch and tighten the mounting bolts.

TORQUE: 25 N·m (2.5 kgf·m , 18 lbf·ft)

Install the removed parts.

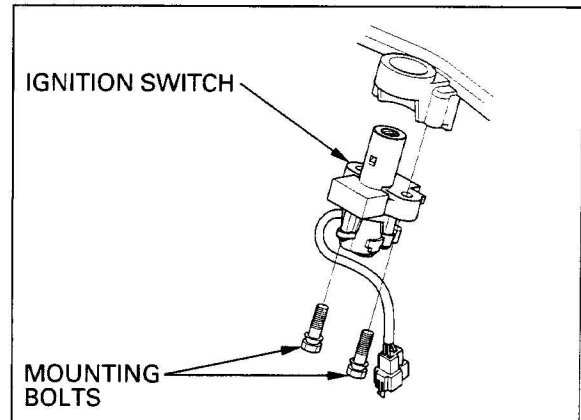

HANDLEBAR SWITCHES

Remove the three bolts and the instrument assembly from the stay (page 19-6).

Disconnect the handlebar switch 6P connectors. Check for continuity between the connector terminals in each switch position. Continuity should exist between the color coded wires as follows:

ENGINE STOP SWITCH

Position \ Color	BI	BI/W
OFF		
RUN	○	○

STARTER SWITCH (Except U type)

Position \ Color	BI/W	Y/R
FREE		
PUSH	○	○

