

STARTER SWITCH (U type)


Color	Y/R	Bl/R	Bu/W
Position			
FREE		○	○
PUSH	○	○	

TURN SIGNAL SWITCH

Color	O	Gr	Lb
Position			
L	○	○	
(N)			
R		○	○

HORN SWITCH

Color	W/G	Lg
Position		
FREE		
PUSH	○	○

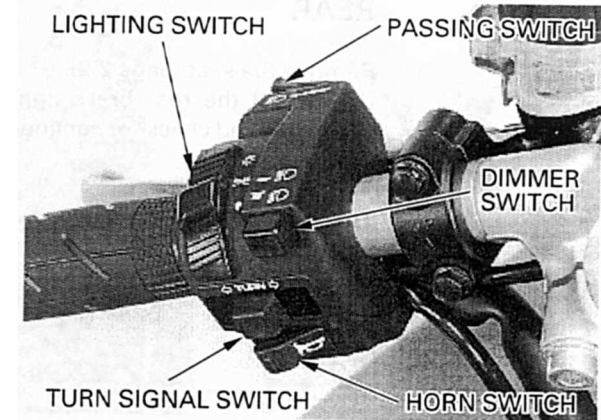

PASSING SWITCH (Except U type)

Color	Bl/R	Bu
Position		
FREE		
PUSH	○	○

LIGHTING SWITCH (Except U type)

Color	Bl/Br	Br	Bl/R	○
Position				
O				
P	○	○		
H	○	○	○	○

DIMMER SWITCH (Except U type)

Color	Bu	○	W
Position			
H	○	○	
(N)	○	○	○
L		○	○

DIMMER SWITCH (U type)

Color	Bu	Bu/W	W
Position			
H	○	○	
(N)	○	○	○
L		○	○

BRAKE SWITCH

FRONT

Disconnect the front brake light switch wire connectors and check for continuity between the switch terminals.

There should be continuity with the front brake lever squeezed and no continuity with the lever released.

