


### REAR

Remove the seat (page 2-2).  
Disconnect the rear brake light switch 2P (white) connector and check for continuity between the connector terminals.


There should be continuity with the rear brake pedal depressed and no continuity with the pedal released.

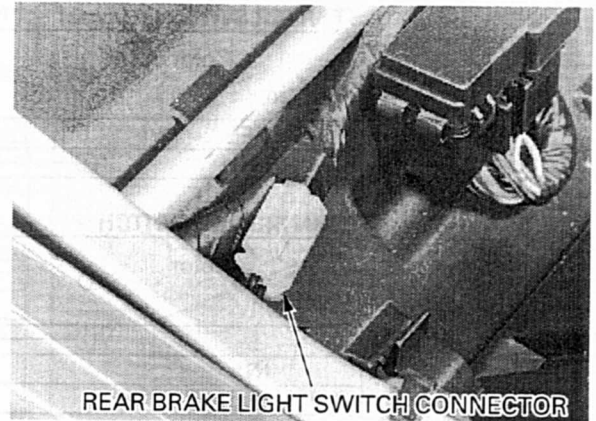

### CLUTCH SWITCH

Disconnect the clutch switch wire connector and check for continuity between the switch terminals.


There should be continuity with the clutch lever squeezed and no continuity with the lever released.

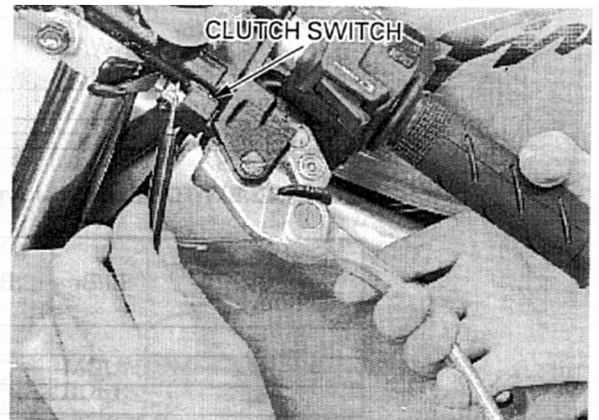

### NEUTRAL SWITCH

#### INSPECTION

Disconnect the neutral switch wire connector.  
Check for continuity between the switch terminal and engine ground.  
There should be continuity with the transmission in neutral, and no continuity with the transmission in gear except neutral.

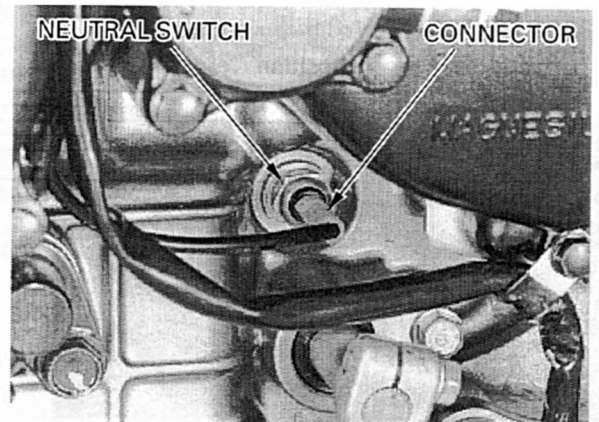

#### REMOVAL/INSTALLATION

Disconnect the neutral switch wire connector.  
Remove the neutral switch from the crankcase.

Install the neutral switch with a new sealing washer and tighten it.

**TORQUE:** 12 N·m (1.2 kgf·m, 9 lbf·ft)

Connect the neutral switch wire connector.

