



Install the right crankcase cover [1] and bolts [2].
 Connect the clutch cable to the clutch lifter arm, then install the clutch cable stay [3] and two bolts [4].
 Tighten the bolts in a crisscross pattern in 2 or 3 steps.

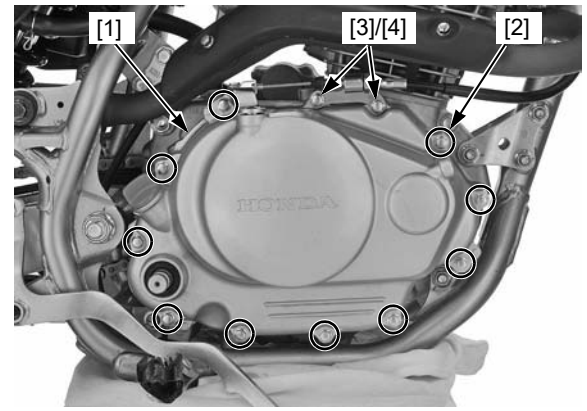


Install the brake pedal return spring [1].
 Connect the brake rod from the brake arm (page 15-7).

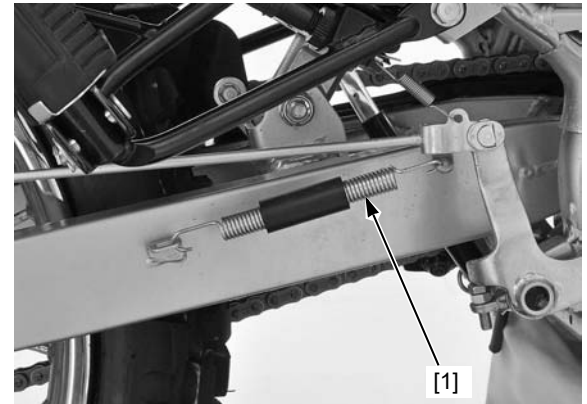

Install the kickstarter pedal [1] in the original position as noted during removal and tighten the bolt [2].

TORQUE: 26 N·m (2.7 kgf·m, 19 lbf·ft)

Fill the crankcase with the recommended engine oil (page 3-7).
 Adjust the brake pedal freeplay (page 3-14).

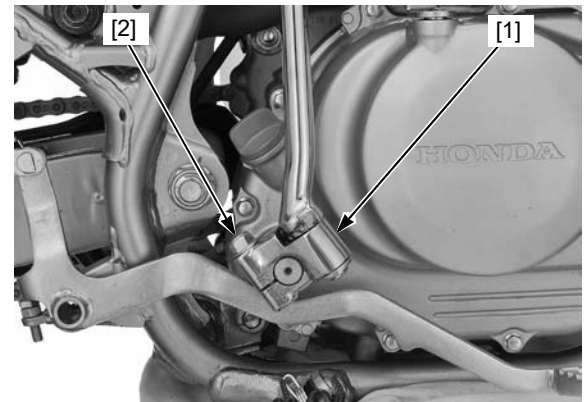

DISASSEMBLY

Remove the right crankcase cover (page 10-4).
 Remove the clutch lifter piece [1] by turning the lifter arm clockwise slightly.
 Drive the spring pin [2] into the clutch lifter arm [3] until the pin end is flush with the lifter arm surface, using the pin driver.

TOOL:
[4] Pin driver 07744-0010200

Pull the clutch lifter arm out and remove the return spring [5].

