


# HYDRAULIC BRAKE (XR125LK/LEK)

## DISASSEMBLY/ASSEMBLY

Disassemble and assemble the master cylinder as following illustration.

- |                    |                              |                   |
|--------------------|------------------------------|-------------------|
| - Nut [1]          | - Brake lever pivot bolt [2] | - Brake lever [3] |
| - Screw [4]        | - Brake light switch [5]     | - Boot [6]        |
| - Snap ring [7]    | - Master piston [8]          | - Spring [9]      |
| - Piston cups [10] | - Reservoir cap [11]         | - Set plate [12]  |
| - Diaphragm [13]   | - Screws [14]                |                   |

- Keep the piston, cups, spring, snap ring, washer and boot as a set; do not substitute individual parts.
- When installing the piston, do not allow lips of the cups to turn inside out.
- Be sure that the snap ring is firmly seated in the groove.

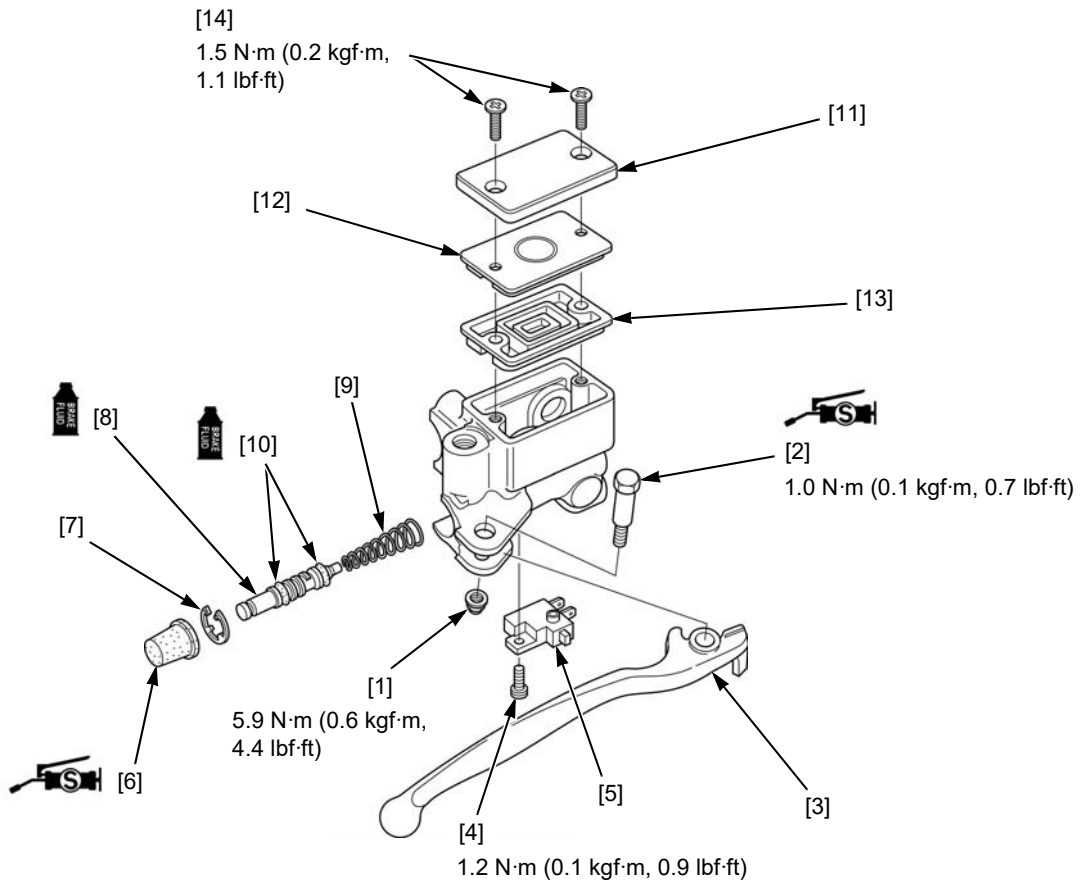

Remove and install the snap ring [1] using the special tool.

**TOOL:**

[2] Snap ring pliers

07914-SA50001

