


CLUTCH SWITCH

Disconnect the clutch switch connectors [1].

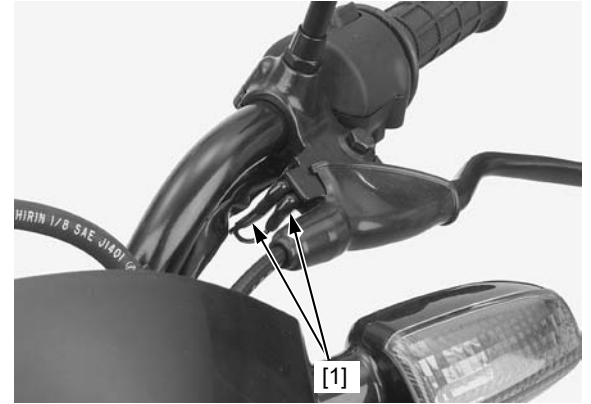

There should be continuity with the clutch lever [1] applied, and there should be no continuity when the clutch lever is released.



NEUTRAL SWITCH

INSPECTION


Remove the right side cover (page 2-2).

Disconnect the neutral switch wire connector [1].

Shift the transmission gear into neutral.

Check for continuity between the Light Green/Red terminal and body ground.

There should be continuity.

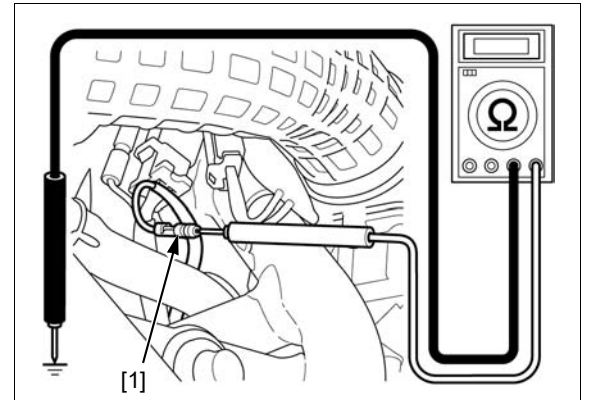

REMOVAL/INSTALLATION

Remove the following:

- Right side cover (page 2-2)
- Drive sprocket cover (page 2-5)

Remove the neutral switch (Light green/red) wire connector [1] from the boot, then disconnect it.

