




## FUEL LINE

Replace any cracked, damaged or leaking parts.

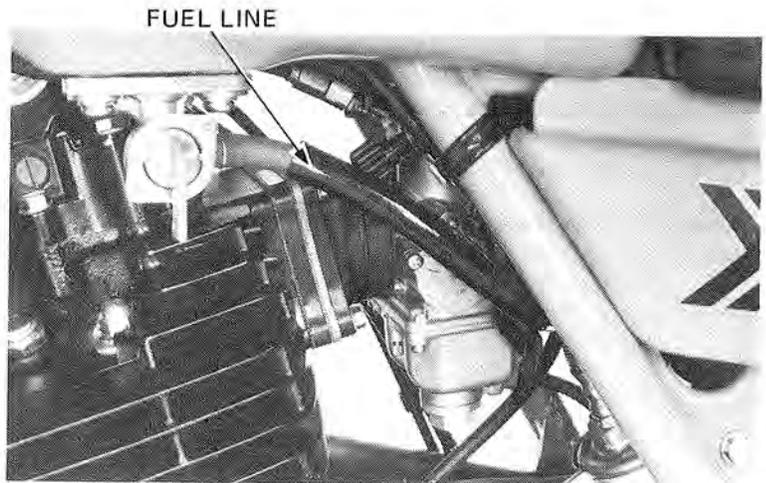


## THROTTLE OPERATION

Check for smooth throttle full opening and automatic full closing in all steering positions.

Make sure there is no deterioration, damage, or kinking in the throttle cable, and that the throttle grip free play is 2–6 mm (1/8–1/4 in) at the throttle grip flange.

THROTTLE GRIP FREE  
PLAY: 2–6 mm (1/8–1/4 in)

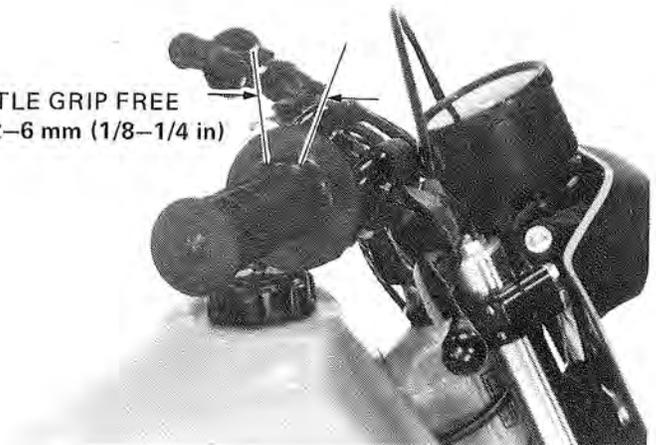

Throttle grip free play can be adjusted at either end of the throttle cable.

Major adjustments are made with the lower adjuster on the carburetor.

