



ENGINE REMOVAL/INSTALLATION


ENGINE REMOVAL

Drain the oil from the engine.
Remove the seat and fuel tank.
Remove the left and right side covers.



LEFT SIDE COVER

Remove the skid plate.

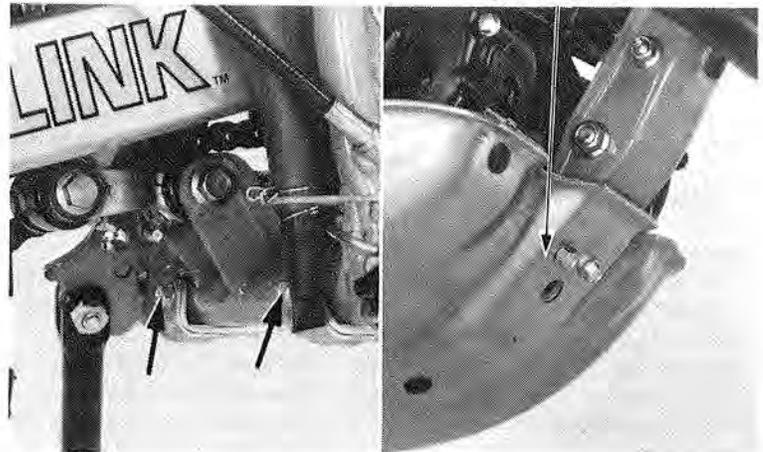


SKID PLATE

Disconnect the AC generator and pulse generator wire.

Disconnect the clutch cable.
Disconnect the manual starter decompressor cable.
Remove the exhaust pipe.

Disconnect the rear brake cable.
Remove the right foot peg and the brake pedal.

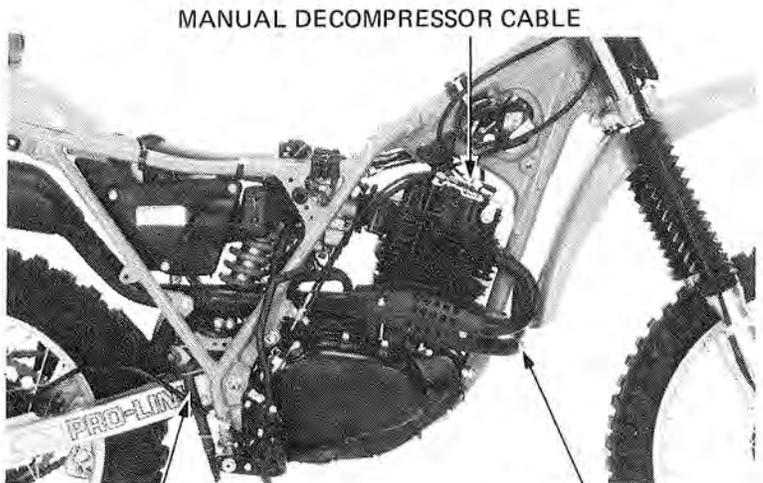

MANUAL DECOMPRESSOR CABLE

REAR BRAKE CABLE

EXHAUST PIPE