

FRONT WHEEL BRAKE/SUSPENSION/STEERING




HONDA
XR500R

WHEEL

Check the rim runout by placing the wheel on a truing stand. Then spin the wheel by hand, and read the runout using a dial indicator.


Check the spokes and tighten any that are loose.

**TORQUE: 2.5 – 0.5 N.m (0.25–0.5 kg-m,
2.8 – 3.6 ft-lb)**

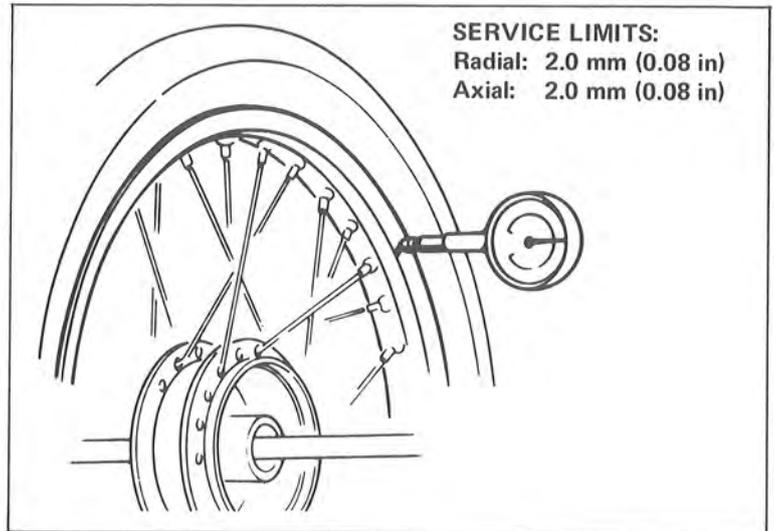

BRAKE DRUM

Remove the brake panel.
Measure the drum I.D.

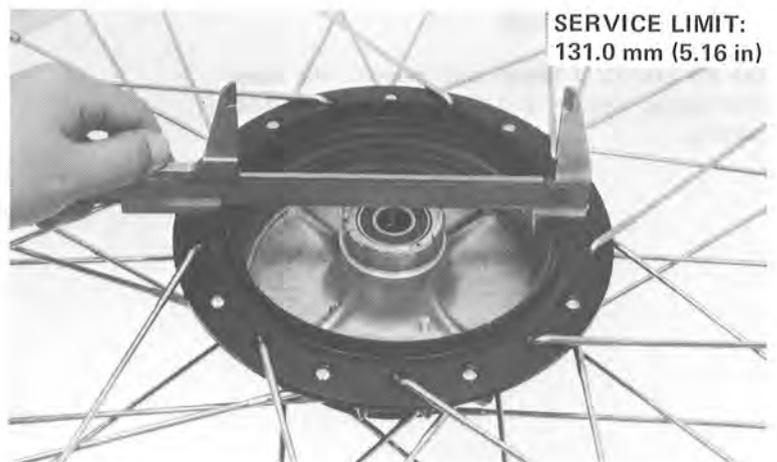

BRAKE LINING

Measure the brake lining thickness.

