




Tighten the axle shaft holder nuts; the upper nuts first, then the lower nuts.

TORQUE: 10–14 N·m
(1.0–1.4 kg·m, 7–10 ft·lb)

Connect the speedometer cable to the speedometer gear box.

AXLE SHAFT HOLDER

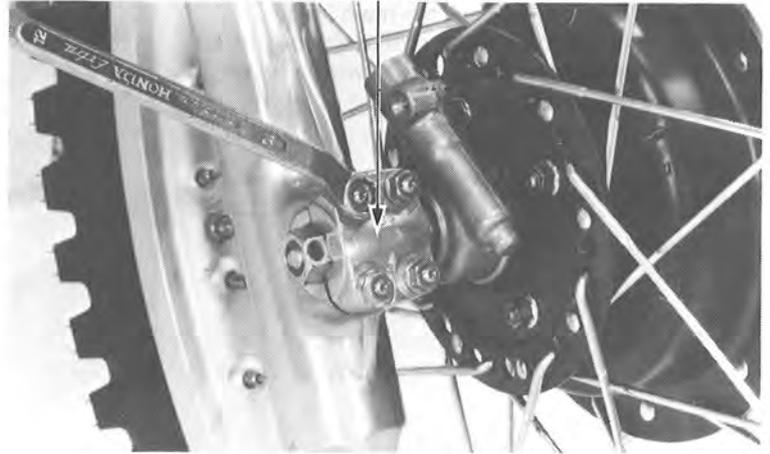

FRONT FORKS

REMOVAL

Remove the front wheel.
Loosen the top bridge and steering stem bolts.
Remove the front forks.



DISASSEMBLY

Remove the rubber cap.
Release the air from each fork tube.

WARNING

Be sure to release front fork air pressure before disassembling to prevent parts from becoming projectiles.

FRONT FORK TUBE

