



FORK TUBE/FORK PISTON/SLIDER

Check the fork tubes, bushings, slider and piston for score marks, scratches, excessive or abnormal wear. Replace if necessary.

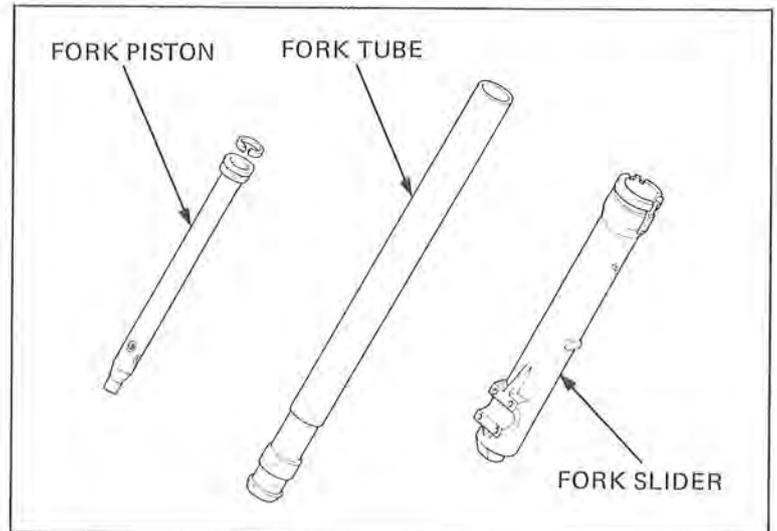

Set the fork tube on V blocks and measure the runout. Take 1/2 of total indicator reading to determine the actual runout.

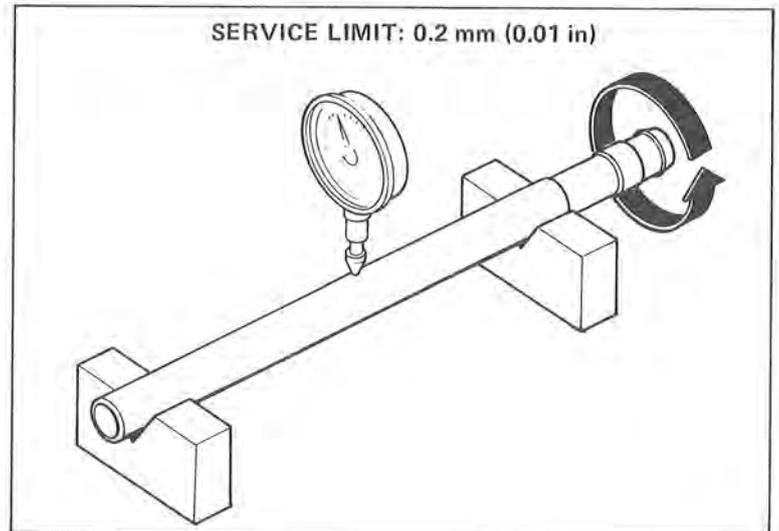

Check the bushings for excessive wear or scratches. If copper appears on more than 3/4 of the entire surface, replace the bushings. Replace the back-up ring if there is distortion at the points shown. Check the fork piston ring for wear or damage. Check the rebound spring for fatigue or damage.

