




CDI UNIT

INSPECTION

Disconnect the wires and check continuity of the CDI terminals. Replace the CDI unit if the readings are not within the limits shown in the table.

NOTE

- The CDI unit is fully transistorized.
- For accurate testing, it is necessary to use a specified electric tester. Use of an improper tester may give false readings.
- Use a SANWA ELECTRIC TESTER (P/N 07308-0020000) or KOWA ELECTRIC TESTER (TH-5H)

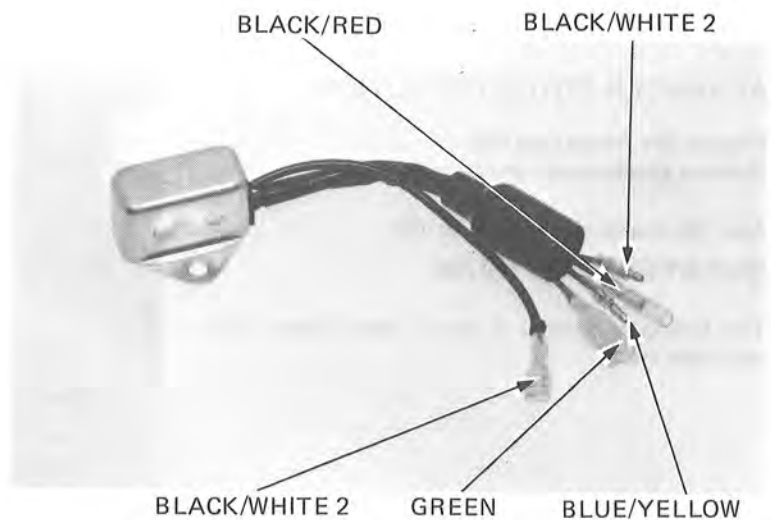

Range:
 SANWA: x K Ω
 KOWA: x 100 Ω

+ Probe -	Black/Red	Green	Black/White ¹	Blue/Yellow	Black/White ²
Black/Red		∞	0.3–20	∞	∞
Green	1–30		10–100	∞	∞
Black/White ¹	∞	∞		∞	∞
Blue/Yellow	2–50	2–50	10–150		∞
Black/White ²	∞	∞	∞	∞	

Black/White 1 Engine stop switch
 Black/White 2 Primary coil

PULSE GENERATOR

INSPECTION

Disconnect the pulse generator wire connector. Measure the resistance between green and blue/yellow.

RESISTANCE: 90–110 Ω

