

COMMON

DESCRIPTION	TOOL NUMBER	REFER TO SECTION
Wrench, 10 x 12 mm	07708-0030200	3
Adjusting wrench A	07708-0030300	3
Spoke wrench, 5.8 x 6.1 mm	07701-0020300	3
Float level gauge	07401-0010000	4
Valve guide driver, 6.6 mm	07742-0010200	6
Valve spring compressor	07757-0010000	6
Wrench, 17 x 27 mm	07716-0020300	8
Extension bar	07716-0020500	8
Attachment, 32 x 35 mm	07746-0010100	8, 12, 13
Pilot, 20 mm	07746-0040500	8, 10, 13
Pilot, 40 mm	07746-0040900	10
Primary gear holder	07724-0010100	8
Clutch center holder	07724-0050001	8
Driver	07749-0010000	8, 10, 12, 13
Flywheel holder	07725-0040000	9
Rotor puller	07733-0020001	9
Attachment, 52 x 55 mm	07746-0010400	10
Attachment, 62 x 68 mm	07746-0010500	10
Attachment, 72 x 75 mm	07746-0010600	10
Pilot, 17 mm	07746-0040400	10, 13
Attachment, 42 x 47 mm	07746-0010300	10, 12, 13
Pilot, 25 mm	07746-0040600	10
Pilot, 35 mm	07746-0040800	10
Wrench, 30 x 32 mm	07716-0020400	12
Pilot, 15 mm	07746-0040300	12
Remover head, 15 mm	07746-0050400	12
Remover shaft	07746-0050100	12, 13
Remover head, 17 mm	07746-0050500	13
Remover head, 20 mm	07746-0050600	13
Retainer wrench A	07710-0010100	13
Retainer wrench body	07710-0010401	13
Attachment, 24 x 26 mm	07746-0010700	13
Driver	07746-0020100	13
Attachment, 20 mm I.D.	07746-0020400	13
Attachment, 37 x 40 mm	07746-0010200	10, 13

VALVE SEAT CUTTER

DESCRIPTION	TOOL NUMBER	REFER TO SECTION
38.5 mm flat cutter	07780-0012400	} 6
40 mm seat cutter	07780-0010500	
35 mm seat cutter	07780-0012300	
37.5 mm intake cutter	07780-0014100	
6.6 mm cutter holder	07781-0010201	