

LUBRICATION

INSPECTION

Check the oil pass pipe for damage, bends or clogging and replace if necessary.

Check the pipe bolts for clogging and damage.


If the parts are clogged, clean them with non-flammable or high flash point solvent.

INSTALLATION

Install the oil pass pipe and loosely tighten the bracket bolts. Tighten the pipe bolts with new copper washers.


TORQUE: 12 N·m (1.2 kg-m, 9 ft-lb)

Tighten the bracket bolts.

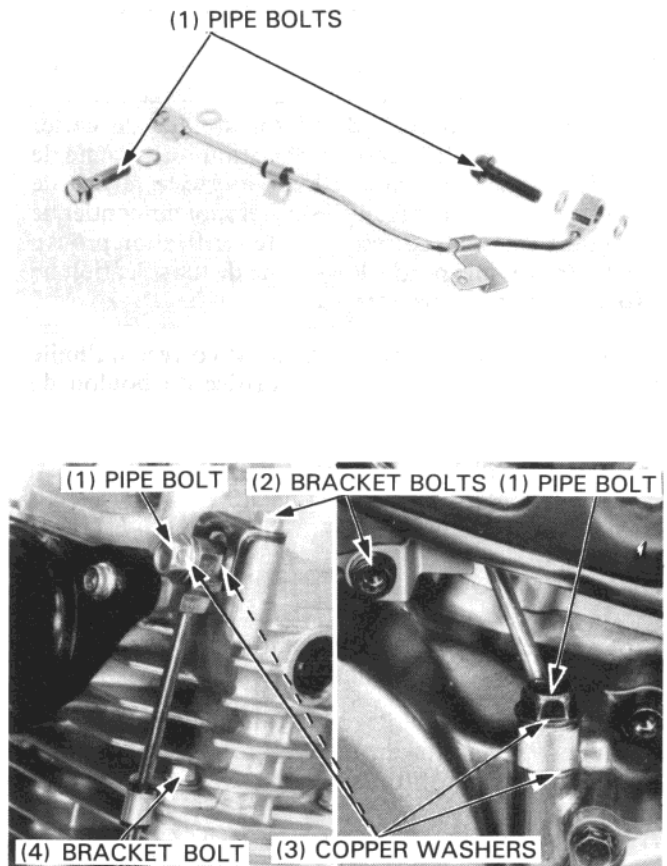

OIL COOLING SYSTEM

Check the oil pipe and hose for damage or leaks.

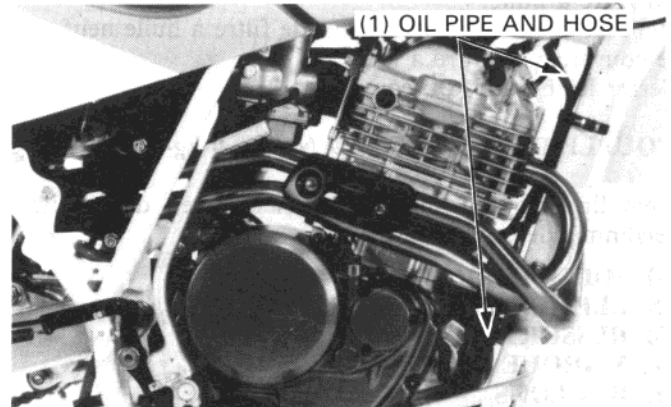

REMOVAL

Remove the fuel tank (page 4-3).

Remove the skid pipe (page 5-3).

Remove the oil drain bolt at the frame down tube to drain the oil (page 2-2).

Loosen the oil inlet hose and outlet pipe joint nuts. Remove the oil pipe clamp.

